


Alta

Digital Handset Operation

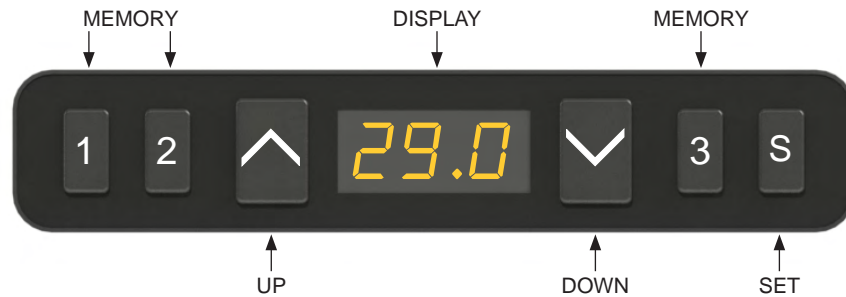

! The table must be initialized when installed or when components are replaced. This must be done prior to operating the table for normal use.

1. Initialization procedure

Step	Operation	Motion
1	Press and hold ▲&▼ simultaneously more than 3 seconds	Legs begin to move down at a half speed of normal operation
2	Keep pressing ▲&▼	Legs move down to the lowest position and rebound 2-5 mm, then stop
3	Release ▲&▼ together	Initialization is completed

2. Move table up & down

Step	Operation	Motion
1	Press and hold ▲	Legs move up
2	Release ▲	Legs stop
3	Press and hold ▼	Legs move down
4	Release ▼	Legs stop

3. Set handset memory position

Step	Operation	Motion
1	Press and hold ▲ or ▼, then release	Run the legs to the position you want the table surface to be
2	Click button S, then click button 1 or 2 or 3 within next 3 seconds	Position 1 or 2 or 3 is saved

4. Operation of stored memory positions

Step	Operation	Motion
1	Press and hold the button 1 or 2 or 3	Legs return to the corresponding position saved

5. Change handset display from centimeter to Inches

Step	Operation	Motion
1	Press and hold button S, then press	The height information will be changed between centimeters

	and hold ▼, keep about 3 seconds	and inches
2	Release the buttons	completed



Values in inches will be displayed in increments of 0.5" inches. Values in centimeters will be displayed in 1.0 centimeter increments.

6. Verify display switch data to table height

Step	Operation	Motion
1	Set the table at any height, recommended at the bottom position	Measure the table actual height and write down the number in inches or in centimeters
2	Press and hold button S, then press and hold ▲, keep about 3 seconds	The first number is flashing on the screen
3	Release the buttons, then click ▲ or ▼ to change the first number	The first number is being increased or decreased to the first number you measured
4	Click button S	The second number is flashing on the screen
5	Click ▲ or ▼ to change the number	The second number is being increased or decreased to the second number you measured
6	Click button S	The third number is flashing on the screen
7	Click ▲ or ▼ to change the number	The third number is being increased or decreased to the third number you measured
8	Click button S	Completed

7. Lock the stroke

Step	Operation	Motion
1	Press and hold ▲ or ▼, then release	Run the legs to the position you want the table surface to be
2	Press and hold button S, then press and hold 1, keep about 3 seconds	Letter "L" is indicated on the screen. That means the position is locked at the lowest position that the table can be moved to
3	Release the buttons	Completed



1. Legs aren't able to run below the locked position
2. Memory position(s) are/is below the locked position will lost even after the table is unlocked, you need to follow SET MEMORY POSITIONS again to reset these memory positions

8. Unlock the stroke

Step	Operation	Motion
1	Press and hold button S, then press and hold 2, keep about 3 seconds	Letter "C" is indicated on the screen. That means the table's unlocked and can be moved in full range
2	Release the buttons	Completed

Alta

Troubleshooting

Fault Issue	Corrective Action
After connecting the power, press ▼ or ▲, the legs have no response.	Re-initialize the table;
	Check if the connection is correct or not;
	Please contact your supplier.
After connecting the power, press and hold ▼ and ▲, the legs have no response.	Check if the connection is correct or not;
	Please contact your supplier.
The legs rising slowly.	Check if the input power is correct or not; Please contact your supplier
The legs don't move according to your operation.	Please contact your supplier.
One leg moves while the other leg does not move.	Check if the connection is correct or not;
	Please contact your supplier.
Legs only move down and don't move up.	Re-initialize the table;
	Please contact your supplier.
Table slides down itself.	Check if the weight of the load on the table exceeds 75KG or not;
	Please contact your supplier.
The table goes into initialization frequently.	Check if the weight of the load on the table exceeds 75KG or not;
	Check the noise of the motor;
	Please contact your supplier.