


Alta

Digital Handset Operation

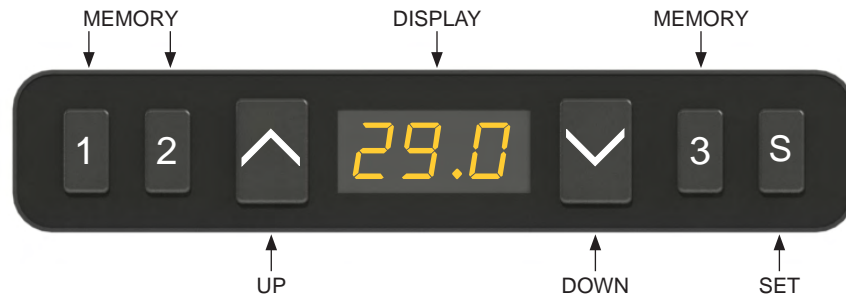

! The table must be initialized when installed or when components are replaced. This must be done prior to operating the table for normal use.

1. Initialization procedure

Step	Operation	Motion
1	Press and hold ▲&▼ simultaneously more than 3 seconds	Legs begin to move down at a half speed of normal operation
2	Keep pressing ▲&▼	Legs move down to the lowest position and rebound 2-5 mm, then stop
3	Release ▲&▼ together	Initialization is completed

2. Move table up & down

Step	Operation	Motion
1	Press and hold ▲	Legs move up
2	Release ▲	Legs stop
3	Press and hold ▼	Legs move down
4	Release ▼	Legs stop

3. Set handset memory position

Step	Operation	Motion
1	Press and hold ▲ or ▼, then release	Run the legs to the position you want the table surface to be
2	Click button S, then click button 1 or 2 or 3 within next 3 seconds	Position 1 or 2 or 3 is saved

4. Operation of stored memory positions

Step	Operation	Motion
1	Press and hold the button 1 or 2 or 3	Legs return to the corresponding position saved

5. Change handset display from centimeter to Inches

Step	Operation	Motion
1	Press and hold button S, then press	The height information will be changed between centimeters

	and hold ▼, keep about 3 seconds	and inches
2	Release the buttons	completed



Values in inches will be displayed in increments of 0.5" inches. Values in centimeters will be displayed in 1.0 centimeter increments.

6. Verify display switch data to table height

Step	Operation	Motion
1	Set the table at any height, recommended at the bottom position	Measure the table actual height and write down the number in inches or in centimeters
2	Press and hold button S, then press and hold ▲, keep about 3 seconds	The first number is flashing on the screen
3	Release the buttons, then click ▲ or ▼ to change the first number	The first number is being increased or decreased to the first number you measured
4	Click button S	The second number is flashing on the screen
5	Click ▲ or ▼ to change the number	The second number is being increased or decreased to the second number you measured
6	Click button S	The third number is flashing on the screen
7	Click ▲ or ▼ to change the number	The third number is being increased or decreased to the third number you measured
8	Click button S	Completed

7. Lock the stroke

Step	Operation	Motion
1	Press and hold ▲ or ▼, then release	Run the legs to the position you want the table surface to be
2	Press and hold button S, then press and hold 1, keep about 3 seconds	Letter "L" is indicated on the screen. That means the position is locked at the lowest position that the table can be moved to
3	Release the buttons	Completed



1. Legs aren't able to run below the locked position.
2. Any saved memory positions that are below the locked position will be lost even after the table is unlocked. You will need to follow SET MEMORY POSITIONS to reset them.

8. Unlock the stroke

Step	Operation	Motion
1	Press and hold button S, then press and hold 2, keep about 3 seconds	Letter "C" is indicated on the screen. That means the table's unlocked and can be moved in full range
2	Release the buttons	Completed

Alta

Troubleshooting

Fault Issue	Corrective Action
After connecting the power, press ▼ or ▲, the legs have no response.	Re-initialize the table;
	Check if the connection is correct or not;
	Please contact your supplier.
After connecting the power, press and hold ▼ and ▲, the legs have no response.	Check if the connection is correct or not;
	Please contact your supplier.
The legs rising slowly.	Check if the input power is correct or not; Please contact your supplier
The legs don't move according to your operation.	Please contact your supplier.
One leg moves while the other leg does not move.	Check if the connection is correct or not;
	Please contact your supplier.
Legs only move down and don't move up.	Re-initialize the table;
	Please contact your supplier.
Table slides down itself.	Check if the weight of the load on the table exceeds 75KG or not;
	Please contact your supplier.
The table goes into initialization frequently.	Check if the weight of the load on the table exceeds 75KG or not;
	Check the noise of the motor;
	Please contact your supplier.



SAFETY NOTICE

Instability Hazard

Mobile items on casters such as flip top, personal and movable tables of any type and storage items of any type may present an instability hazard if not secured correctly while in use or in storage. Flip top tables or training tables of any type, are inherently more unstable when folded. BRC provides the following guidelines & warnings when using mobile products:

- Lock casters immediately after moving. Do not leave the casters unlocked when in use or in storage.
- Motion may increase the instability of any item with casters. If the wheels hit an obstruction the table's forward momentum often causes overturn, especially if the item is not equipped with wheel extensions. Exercise strong caution while moving these items.
- Use caution when abrupt level changes in the floor are present (such as a doorway or room threshold) as caster failure or tipping may result.
- Do not stand, sit or lean on mobile items for support. They are not intended for this use and personal injury or property damage may result.
- Mobile units that feature height adjustable elements must be lowered to the minimum compressed height when moving to prevent instability. It is also recommended the user remove all computer equipment or other accessories to prevent possible weight imbalance or damage to equipment.
- Failure to follow the guidelines above may result in property damage or personal injury.

Heavy Load

- This product must be anchored to wall to ensure stability & safety.
- It is the owner and installers responsibility to ensure that the wall type and construction is of sufficient strength to carry the loads of any wall mounted products and their contents.
- Failure of the wall and anchors to support all imposed loads may result in property damage or personal injury.
- BRC can provide size and empty weight of its products only. As wall blocking is considered a building construction process, BRC cannot provide recommendations in this respect and cannot be responsible for damage or injury that may occur as a result of improper installation and/or blocking.

Load Bottom Drawer First!

- Operate one drawer at a time.
- Unit may tip if loaded incorrectly.
- Unit should be attached to a wall or other furniture to reduce tipping hazard.
- Always load the heaviest files in the bottom drawer.
- Failure to follow the guidelines above may result in property damage or personal injury.

11/2022