PLANT MANAGER	PRODUCTION	PURCHASING & SCHEDULING	BUSINESS ENTERPRISES LIMITED	PHONE: (905) 873-8509 FAX: (905) 873-9165 TOLL FREE: (877) 260-4309 email: info@brccanada.com		PART NUMBER  DESCRIPTION	DWG NO.	SHEET 1 OF 1	
Q.A.	FOREMAN	CNC	24 ARMSTRONG AVE.,GEORGETOWN,ON L7G 4F				ANTITIP BRACKET TO CABIN		
			REV ECN No REVISIONS	AUTH	BY	DATE	DRAWN BY: CF	DATE: 2020-06-25	TOLERANCES  UNLESS OTHERWISE SPECIFIED
CNC PROGRAM#							CHECKED BY: VT  MATERIAL:	DATE:	DIMENSIONAL TOLERANCES ARE: .000 DECIMALS ± 1/64 INCHES (STEEL)
									.000 DECIMALS ± 1/64 INCHES (WOOD) ANGULAR TOLERANCES ± 0°30'
							DO NOT SCALE DIMENSIONS TO DRAWING.		
		TAIL B LE 1 : 6	EG COLUMN	DETAIL H SCALE 1 : 6					CKNOWLEDGEMENT DDUCT DETAILS
PLATE-	•		_	15.88 [.63] MAX DISTANCE			CUST BRACKET QTY-1	0    0    0	
BRACKET-			JRAKOSHI BOLT ART#9200998)	NOTE: INSTALL WI ONLY ALWAYS CH			MURAKOSHI B	OLT 1/4-20 X2.7:	5"
Vr				TO ENSURE YOU DO NO YOU ARE ATTACHING	T DAM	AGE CAI	MURAKOSHI N BINET (PART NUMBEI QTY-2		9
	B						INSTRUCTIONS: -PLACE BRACKET AF AND SECURE WITH I -FASTEN TO UNIT W	PLATE MURKOS	
noted details are correct a details are missing, or if re to BRC and await a final of be required after signing, this nature require a new: Note: The final signed dra	as presented and they hereby a evisions to this drawing are req drawing including the revisions the Customer must communic sign off drawing and a new dat awing supersedes any and all of	authorize BRC Business Enterpris juired, do not sign this docu requested in the markup. Should ate details in writing including a m ted authorizing signature. Charge letails supplied by the Customer C	is in the above drawing including dimensions and es Ltd. to release the order for production. If ment . Instead, mark up this drawing accordingly, return any changes to the specifications or drawing details arkup of the drawing for reference. Changes of s for material or labour incurred may apply.  In a purchase order, verbally, email, or avaing contains all final details and a signed	Final Approval Signature:  Name (Please Print):  Title:					
			rawing contains all final details and a signed production on the Customers behalf.	PATH:					



## **Instability Hazard**

Mobile items on casters such as flip top, personal and movable tables of any type and storage items of any type may present an instability hazard if not secured correctly while in use or in storage. Flip top tables or training tables of any type, are inherently more unstable when folded. BRC provides the following guidelines & warnings when using mobile products:

- · Lock casters immediately after moving. Do not leave the casters unlocked when in use or in storage.
- Motion may increase the instability of any item with casters. If the wheels hit an obstruction the table's forward
  momentum often causes overturn, especially if the item is not equipped with wheel extensions. Exercise strong
  caution while moving these items.
- Use caution when abrupt level changes in the floor are present (such as a doorway or room threshold) as caster failure or tipping may result.
- Do not stand, sit or lean on mobile items for support. They are not intended for this use and personal injury or property damage may result.
- Mobile units that feature height adjustable elements must be lowered to the minimum compressed height when moving to prevent instability. It is also recommended the user remove all computer equipment or other accessories to prevent possible weight imbalance or damage to equipment.
- Failure to follow the guidelines above may result in property damage or personal injury.

## **Heavy Load**

- This product must be anchored to wall to ensure stability & safety.
- It is the owner and installers responsibility to ensure that the wall type and construction is of sufficient strength to carry the loads of any wall mounted products and their contents.
- Failure of the wall and anchors to support all imposed loads may result in property damage or personal injury.
- BRC can provide size and empty weight of its products only. As wall blocking is considered a building construction process, BRC cannot provide recommendations in this respect and cannot be responsible for damage or injury that may occur as a result of improper installation and/or blocking.

## **Load Bottom Drawer First!**

- · Operate one drawer at a time.
- · Unit may tip if loaded incorrectly.
- Unit should be attached to a wall or other furniture to reduce tipping hazard.
- · Always load the heaviest files in the bottom drawer.
- · Failure to follow the guidelines above may result in property damage or personal injury.

