



Lock Core Change Procedures

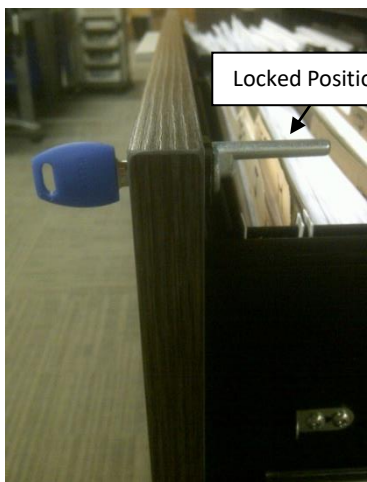


Locked Position

1. Insert blue master key, or key with numerical sequence consistent with the number of the key core

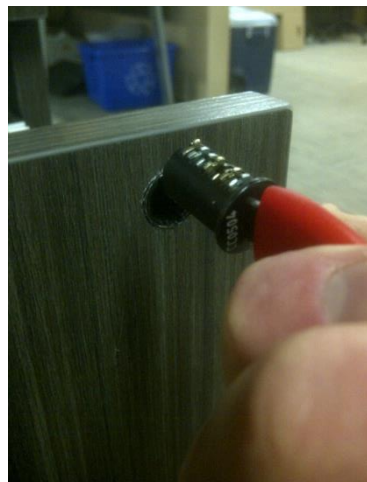


4. Turn red removal key counterclock wise while pulling key towards you

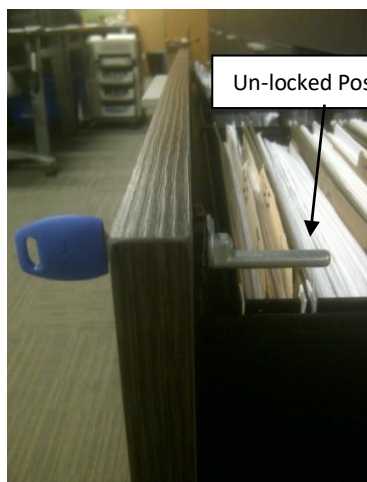

Un-locked Position

2. Using the proper key number or blue master key, unlock the unit (turn clockwise)

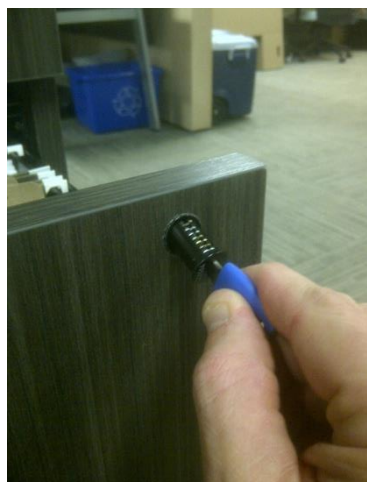


5. To insert new core: use the proper numbered key with the numbered core, and insert with tumblers facing up as illustrated in the adjacent photo



Red Removal Key

3. Insert Red removal key

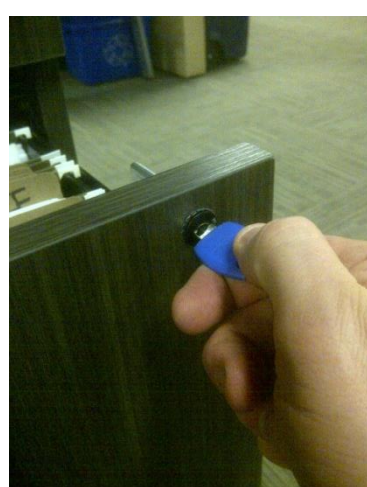

6. Once core is fully placed in housing, turn the lock counter clockwise to engage the lock core. Unit will be in the locked position, use new key to unlock/ lock as desired

*Note these instructions represent a typical storage configuration with a tenon style lock housing. Cam style housing, or special custom units may require installation in a different orientation to accommodate lock function. If the attached instructions do not work with your unit, try reversing the order of operations. For additional assistance contact BRC Customer Service for more information **1-877-260-4309**.