



This guide assumes that the wall mounting surface is level and plumb. Mounting into wood wall studs or concrete is recommended. For metal wall studs or otherwise, sufficient support must be added to accommodate heavy loads. Contact your BRC representative for weight limit requirements and recommendations.

Preparing The Wall Panel

- 1 Prepare the wall panel by connecting the lifting column brackets with the hardware included. Connect all four brackets using the pre-drilled holes in the back panel.




D Nut Inserts, 5/16"-18 x 5/8"
X8



Flat Washer 1/4" ID 9/16" OD
X10




Hex Head Screw, 5/16"-18
X10

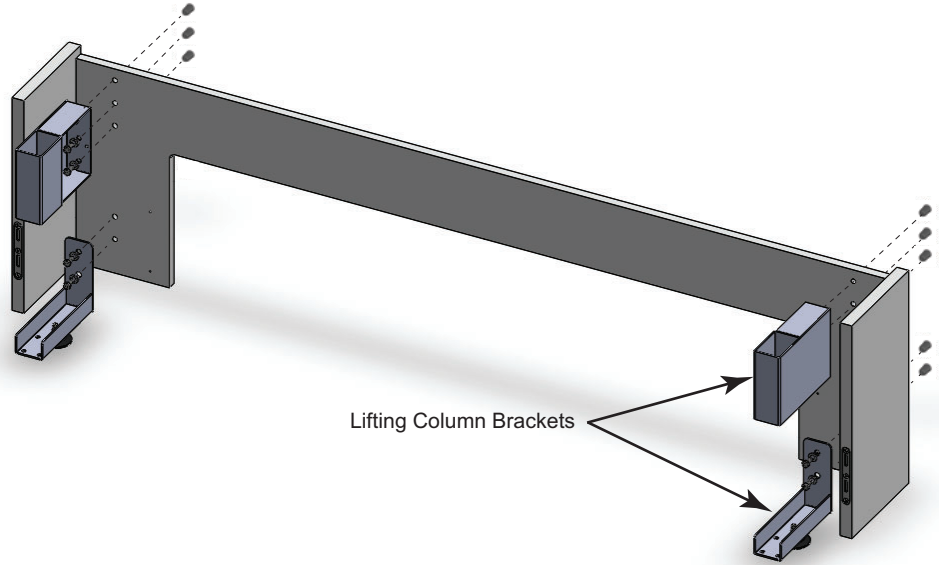


Preparing The Lifting Columns

- 1 Lifting column is pre-installed with M6 x 10 bolt. Insert lifting column into the keyway on the framework then lock in place from the side by attaching with M6 screw.

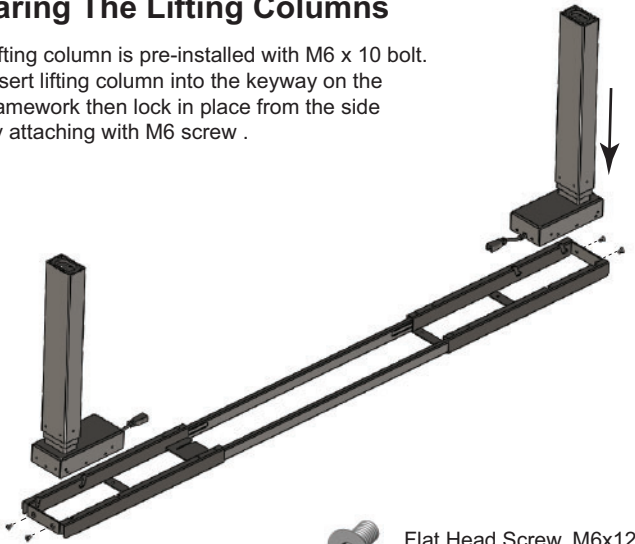


Flat Head Screw, M6x12
X4

- 2 Install cantilever support with screw and star washer to framework.

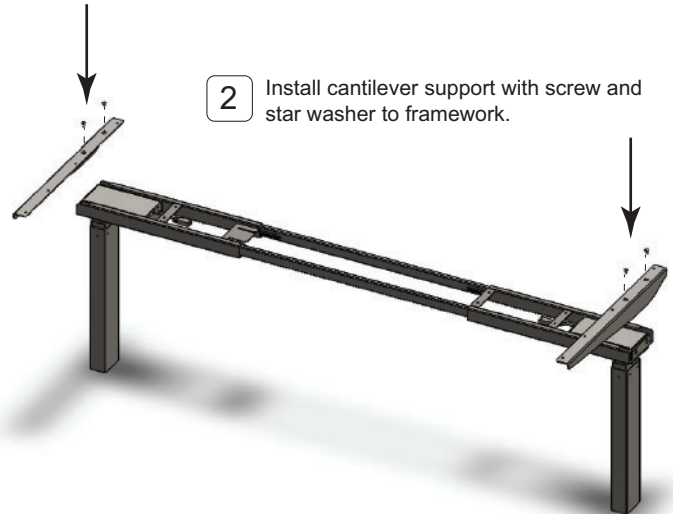


Flat Head Screw, M6x12
X4

Wall Mount Height Adjustable Mesa Assembly

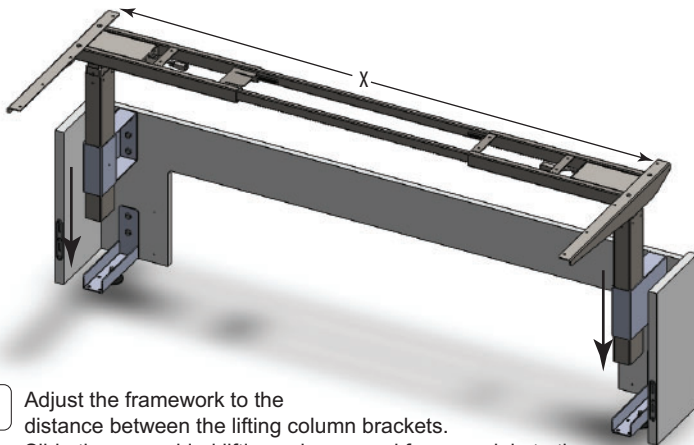


- 1 Adjust the framework to the distance between the lifting column brackets. Slide the assembled lifting columns and framework in to the assembled lifting column brackets on the back panel.

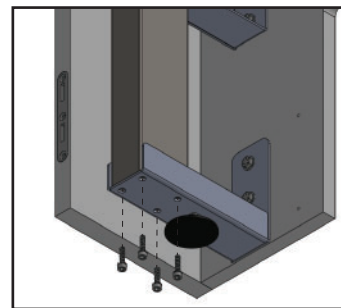


Socket Head Screw, M6x16
X8




Star Washer, M6 **X8**

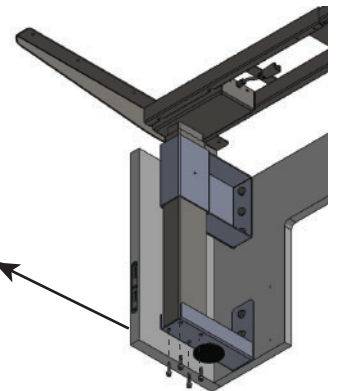


- 2 Connect the lifting columns to the bottom bracket using screws and star washers.

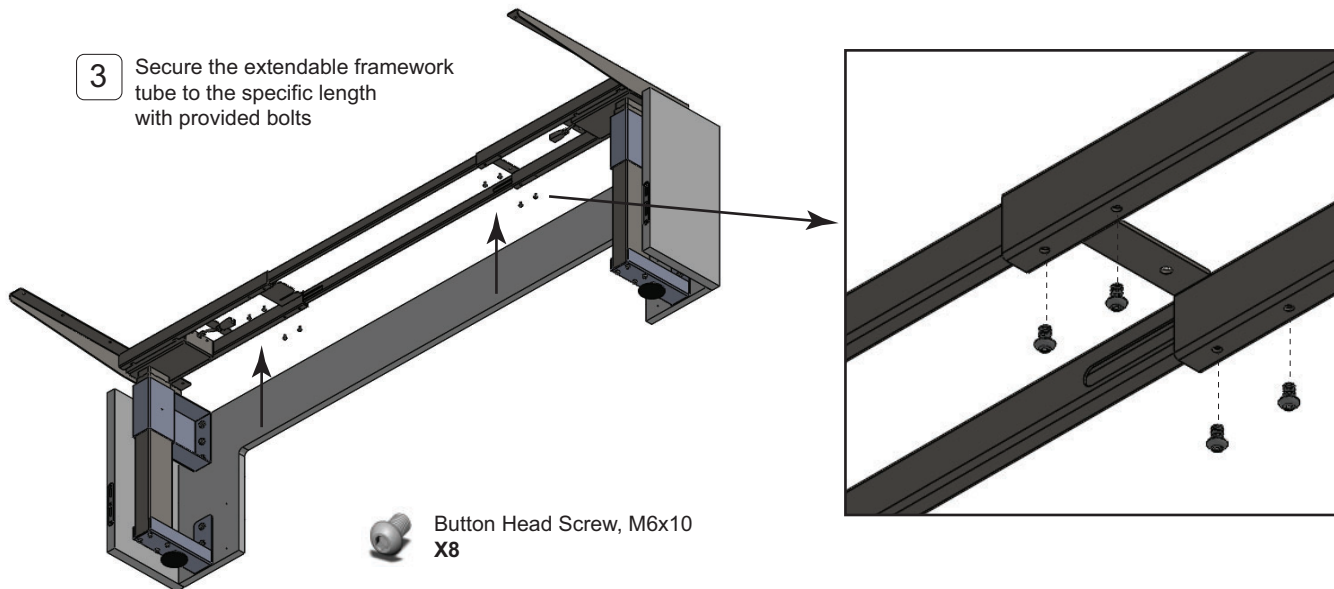


- 4** There are two set screw locations on the top lifting column bracket. Secure the leg by tightening the set screws provided.

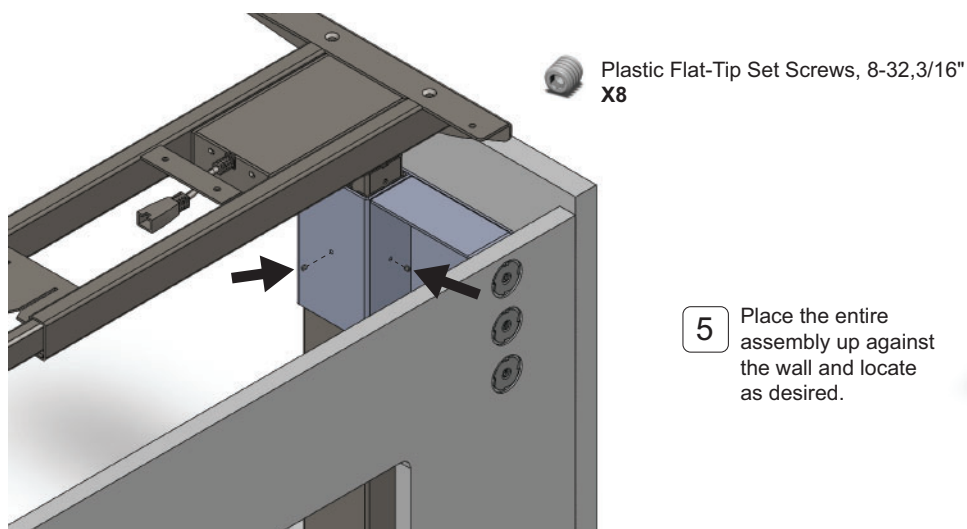


- 5** Place the entire assembly up against the wall and locate as desired.

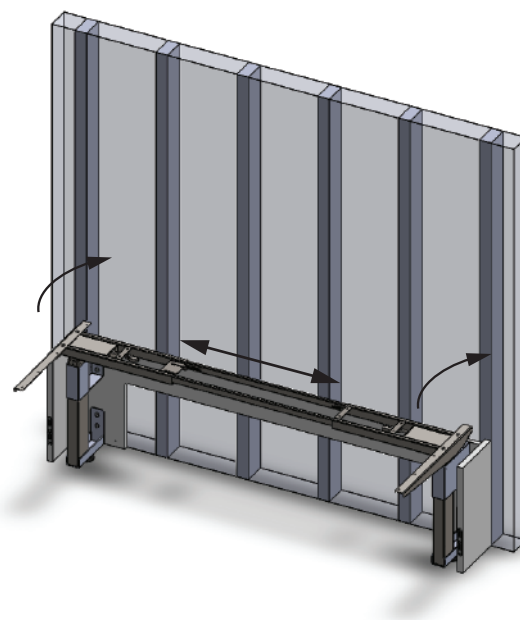


- 6** Make sure the assembled unit is level. Adjust the levelers as needed.

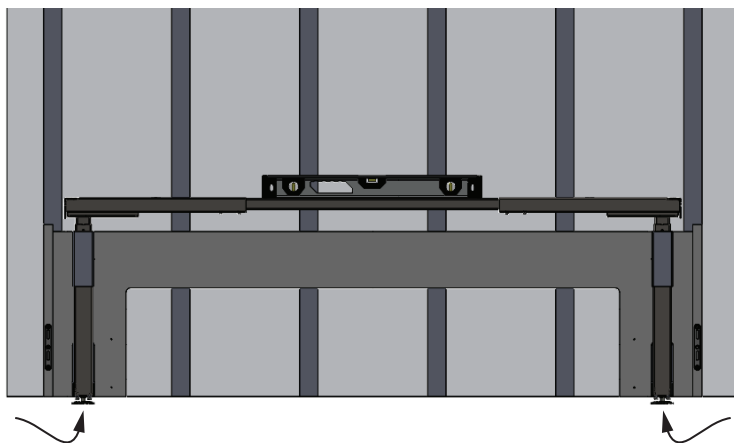

- 7** Choose wall mount hardware (not included) according to wall material. Connect the unit to wall and make sure it's fully secured from all sides.

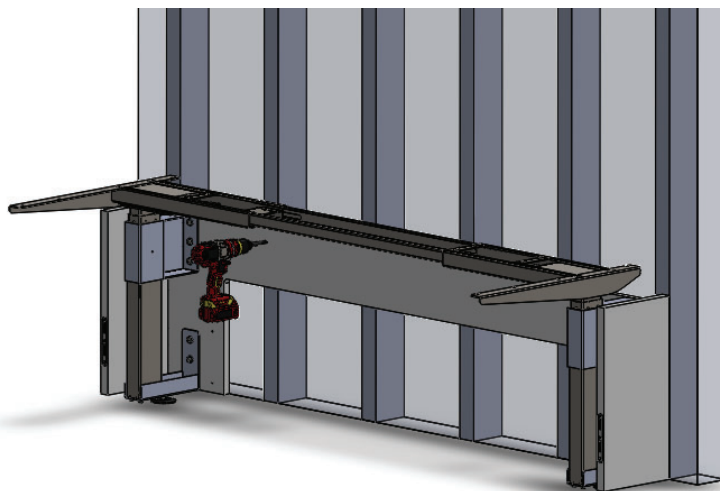


- 8 Place the work surface on top of the framework. Use the provided wood screws to connect the top to the supports. There are pilot holes to help with the process. Make sure the work surface is 1" apart from the wall.

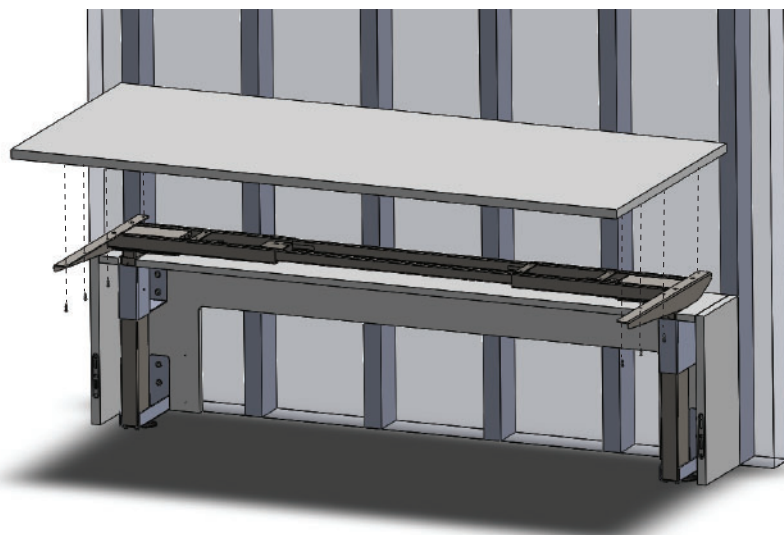


No. 10, 0.75in
Wood Screw
X8


 1" Required
from wall.

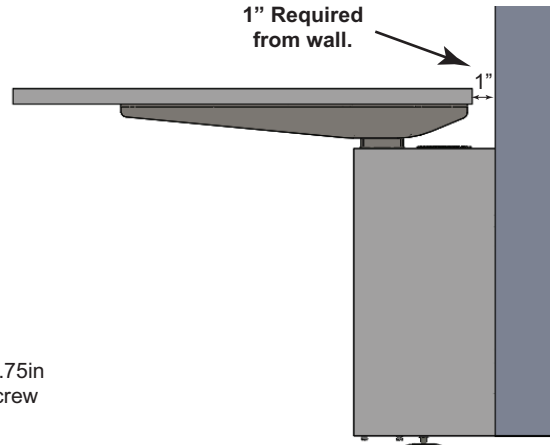



- 9 Ensure wires and wire management is complete. Install the front fascia with flip down door on to the wall mounted assembly by using the mortise brackets on the side gables. Lift up, in and down to engage.

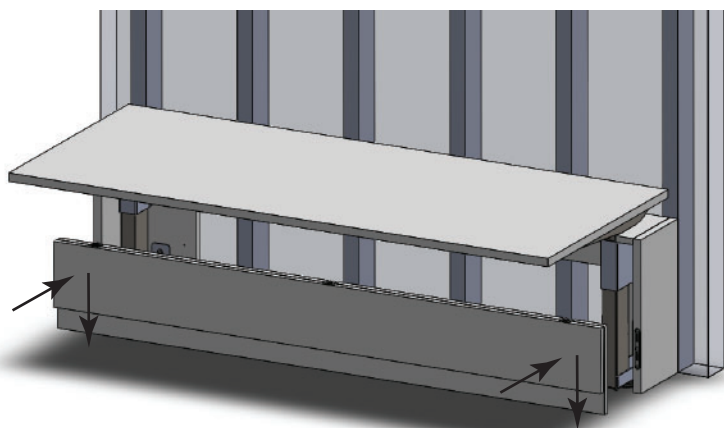

- 10 Close the top flip door. It will be supported with a pre-installed magnetic latch.

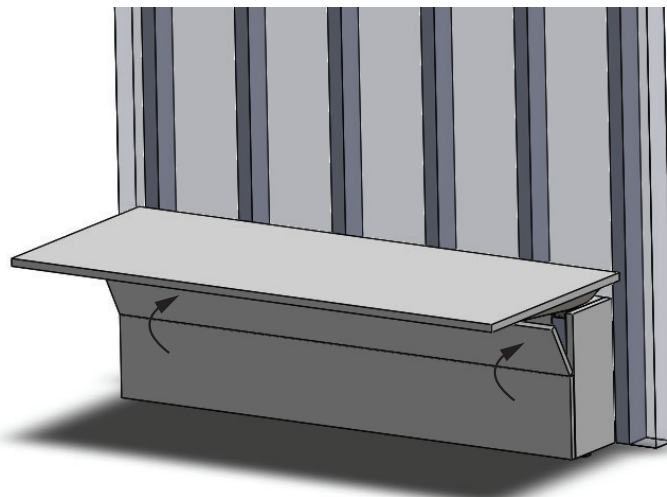

- 11 Move the lifting columns to the highest point for the final step. Slide in the top laminate cover with grommets into the assembly. The top laminate cover sits on top of the upper lifting column brackets, no fasteners are required.

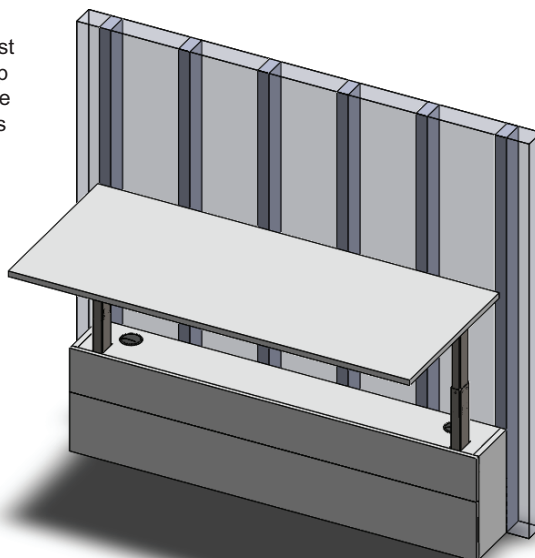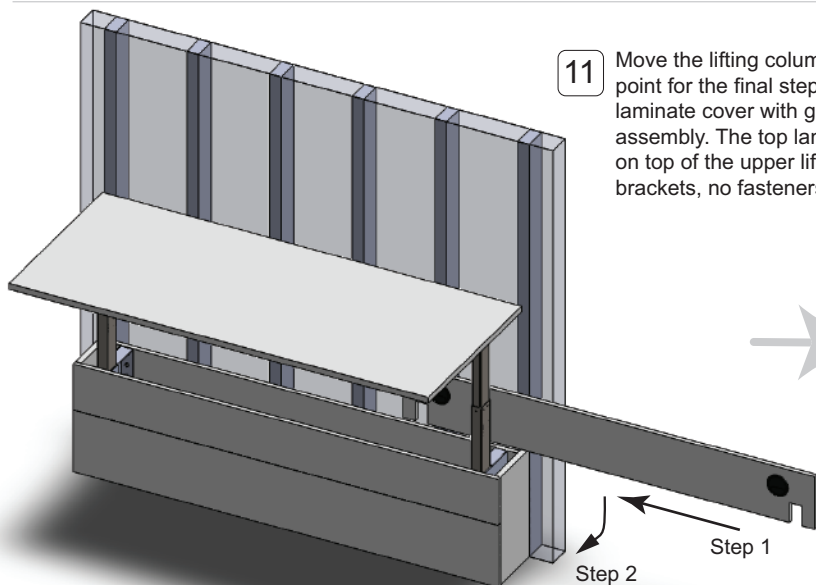



SAFETY NOTICE

Instability Hazard

Mobile items on casters such as flip top, personal and movable tables of any type and storage items of any type may present an instability hazard if not secured correctly while in use or in storage. Flip top tables or training tables of any type, are inherently more unstable when folded. BRC provides the following guidelines & warnings when using mobile products:

- Lock casters immediately after moving. Do not leave the casters unlocked when in use or in storage.
- Motion may increase the instability of any item with casters. If the wheels hit an obstruction the table's forward momentum often causes overturn, especially if the item is not equipped with wheel extensions. Exercise strong caution while moving these items.
- Use caution when abrupt level changes in the floor are present (such as a doorway or room threshold) as caster failure or tipping may result.
- Do not stand, sit or lean on mobile items for support. They are not intended for this use and personal injury or property damage may result.
- Mobile units that feature height adjustable elements must be lowered to the minimum compressed height when moving to prevent instability. It is also recommended the user remove all computer equipment or other accessories to prevent possible weight imbalance or damage to equipment.
- Failure to follow the guidelines above may result in property damage or personal injury.

Heavy Load

- This product must be anchored to wall to ensure stability & safety.
- It is the owner and installers responsibility to ensure that the wall type and construction is of sufficient strength to carry the loads of any wall mounted products and their contents.
- Failure of the wall and anchors to support all imposed loads may result in property damage or personal injury.
- BRC can provide size and empty weight of its products only. As wall blocking is considered a building construction process, BRC cannot provide recommendations in this respect and cannot be responsible for damage or injury that may occur as a result of improper installation and/or blocking.

Load Bottom Drawer First!

- Operate one drawer at a time.
- Unit may tip if loaded incorrectly.
- Unit should be attached to a wall or other furniture to reduce tipping hazard.
- Always load the heaviest files in the bottom drawer.
- Failure to follow the guidelines above may result in property damage or personal injury.

11/2022