
3 Leg Quick Connect Desk Assembly Instructions

a. Assembly Diagram

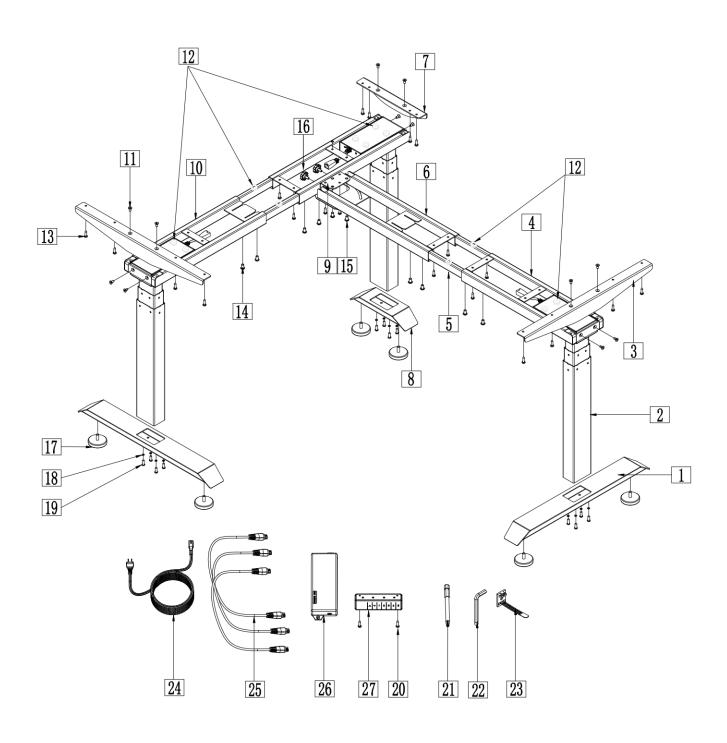



b. Packing list

Base Frame Component 1. Foot-Long ------ 2pcs 2. Lifting Column ----- 3pcs 3. Side Support-Long ------ 2pcs 4. Framework-1 ------ 2pcs 5. Extendable Tube 6. Framework-2 7. Side Support-Short ------ 1pcs ----- 1pcs 8. Foot-Short 9. 3rd leg Bracket -----1pcs 10. Framework-3 **Hardware Components** 11. Bolt M6x12 12. Rubber Bumper ----- 16pcs ------ 27pcs 13. Screw #12x3/4 14. Bolt M6x10 ------ 18pcs 15. Bolt 1/4-20x3/4 16. Thumb Screw M6x16 ----- 6pcs 17. Leveling Glides-1" 18. Star Washer

Electric Components

Ball Point

19. Bolt M6x1620. Screw #8x3/4

21. 4mm Hex Bit

23. Cable Tie

22. 4mm Hex Wrench-

| 24. Power Cord-108" | 1pcs |
|---------------------|------|
| 25. Patch Cord-59" | 3pcs |
| 26. Control Box | 1pcs |
| 27. Handset | 1pcs |



P: 905.873.8509 Toll Free: 1.877.260.4309


------ 12pcs


------7pcs

c. How to Set Up the Base Frame.

1. Take out the Framework pieces from carton and extend the outer frame sections.




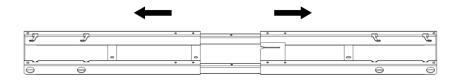

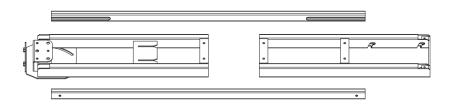


2. Insert Lifting Column into frame keyway leaving pre-installed bolts M6x10 in place, Lock lifting column (Part 2) into frame by Installing with Bolt x6(Part 11,6pcs)




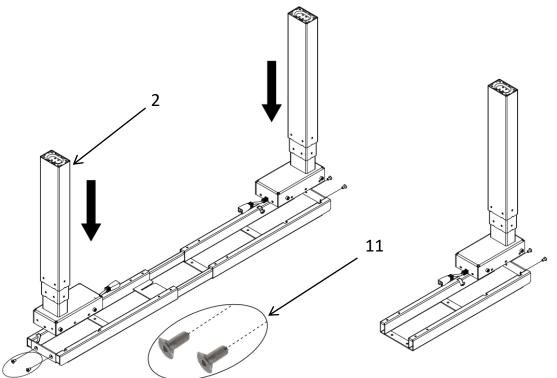




- 3. Install Leveling Glides x6(Part 11) to Foot x 3.
- 4. Install Foot x2 (Part 1) to Lifting Column (Part 2) and Foot x1(Part 8) with lifting column (Part 2). Secure with with Bolts x12(Part19,M6x16) and Star Washer x12(Part 18).

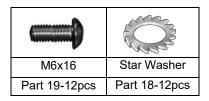

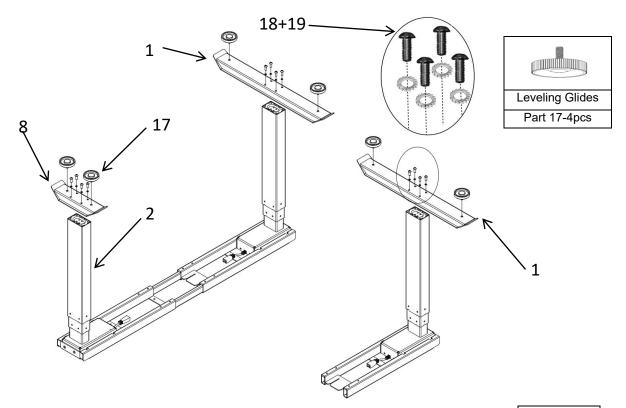

5. Install the Side Support to Framework with Bolt x6(Part 11,M6x12),

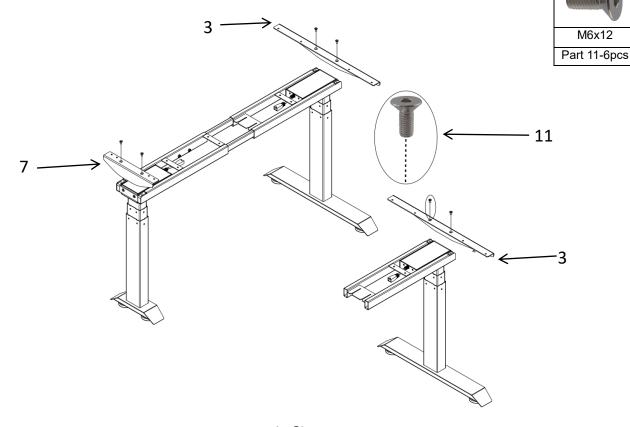




customerser vice @brc.group

P: 905.873.8509 Toll Free: 1.877.260.4309


- 6. Insert extendable tube x2(Part 5) into 3rd leg framework.
 7. Attach the one section of frame with the long foot and short foot to the single leg frame section with thumb screw x2 (Part 16)



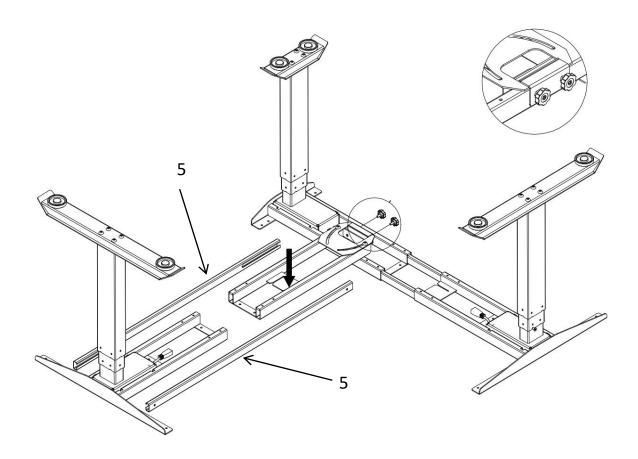




- 8. Centre bracket is locked in place with M6x10 bolts.
- 9. If the angle needs to be adjusted simply loosen the 2pcs M6x10 first,so that the corner could be adjusted from.
 - $90\,^\circ\,$ -120 $^\circ\,$ tighten bolts to set proper angle.

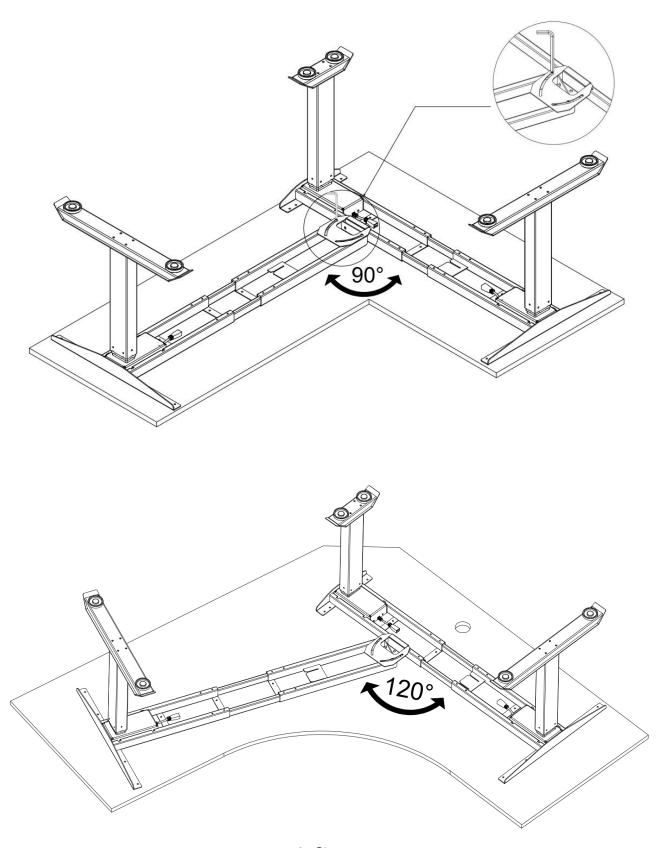



- 10. Set width of base(DIM B) according to width of table top(DIM A) Refer to grid below.
- 11. Tighten Bolt x16(Part 14,M6x10) to set the base frame to the correct width.




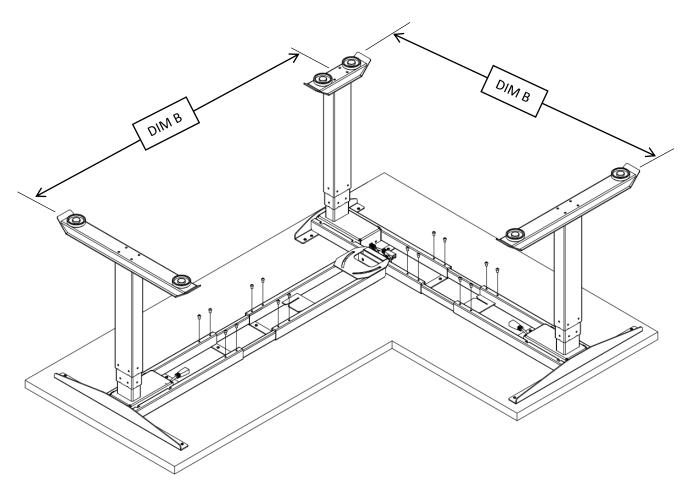

| | Dimension | |
|---------------|-----------|------------|
| | Α | В |
| Nominal Width | Top Width | Base Width |
| 83 | 83.5 | 72 |
| 77 | 77.5 | 72 |
| 71 | 71.5 | 69.5 |
| 59 | 59.5 | 57.5 |
| 47 | 47.5 | 45.5 |




- 12. Hang the Control box x1(Part 26) on the base.
- 13. Stick Rubber Bumper x 16(Part 12) on top of Lifting Column and Extendable Tube.
- #12x3/4 1/4-20x3/4
 Part 13-27pcs Part 15-3pcs
- 14. Install desktop. Position in the center of top as below picture.
- 15. Using Screw x27(Part 13,#12x3/4) to attach the base to the table top.
- 16.3rd leg bracket need another Bolt x3(Part 15,1/4-20x3/4) to be fixed to table top.

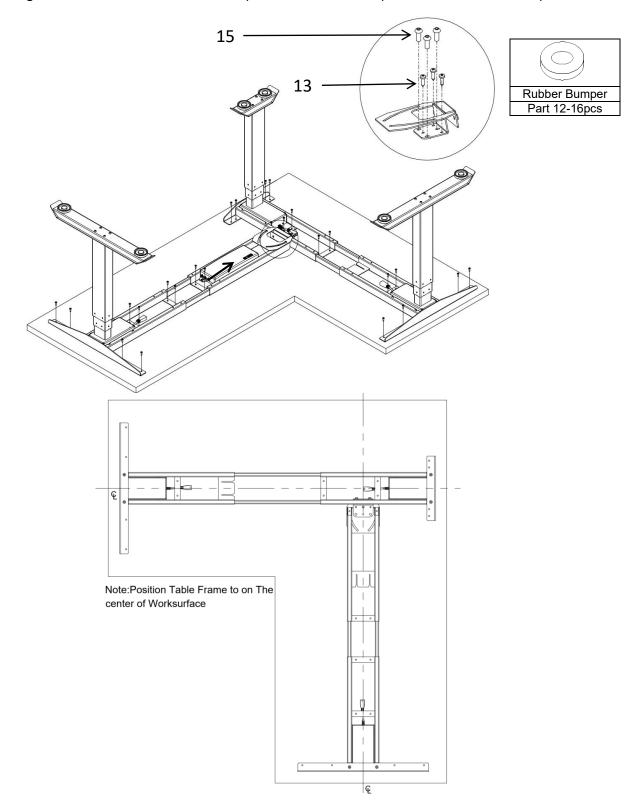




P: 905.873.8509 Toll Free: 1.877.260.4309

17. Install Handset x1(Part 27) with Screw x2(Part 20,#8x3/4). Note: Cable Tie can be fixed under worksurface with #8x3/4

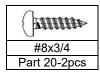


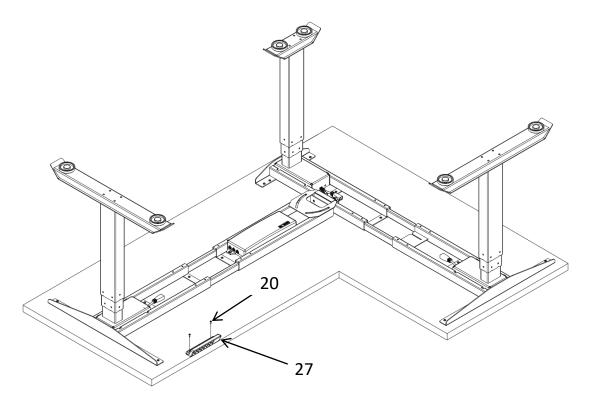



Connecting the Electrical Components

- 18.Attach Patch Cord x3(Part 25) to 6 pin connector on Control box (Part 26)
 And 6 pin connector to Lifting Column x3(Part 2).
- 19. Attach Handset RJ45 connector (Part 27) to Control Box switch port(Part 26).
- 20.Install the Power Cord(Part 24) to Control Box (Part 26).
- 21.Plug Power Cord into Power Supply.Initialize table by pressing and holding down the down button on the handset for 5 seconds.The handset will display "RES" to confirm the reset command.
- 22. Table is ready for use. Consult User instructions for more display and calibration options.

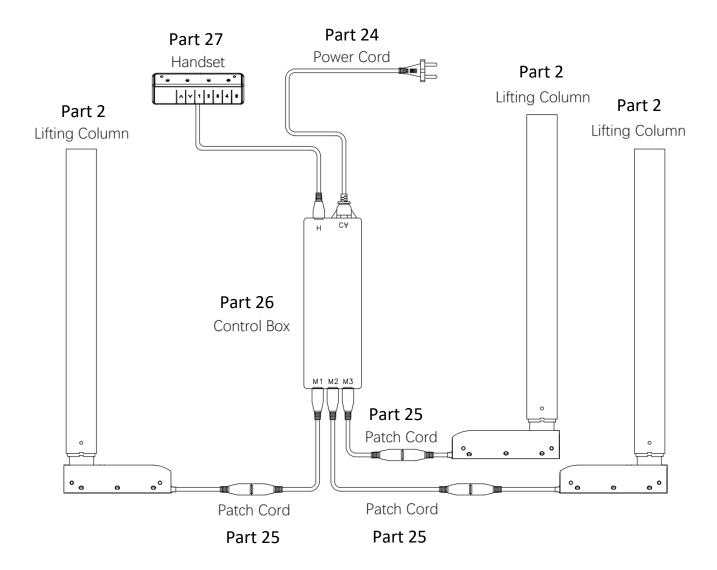





Instability Hazard

Mobile items on casters such as flip top, personal and movable tables of any type and storage items of any type may present an instability hazard if not secured correctly while in use or in storage. Flip top tables or training tables of any type, are inherently more unstable when folded. BRC provides the following guidelines & warnings when using mobile products:

- · Lock casters immediately after moving. Do not leave the casters unlocked when in use or in storage.
- Motion may increase the instability of any item with casters. If the wheels hit an obstruction the table's forward
 momentum often causes overturn, especially if the item is not equipped with wheel extensions. Exercise strong
 caution while moving these items.
- Use caution when abrupt level changes in the floor are present (such as a doorway or room threshold) as caster failure or tipping may result.
- Do not stand, sit or lean on mobile items for support. They are not intended for this use and personal injury or property damage may result.
- Mobile units that feature height adjustable elements must be lowered to the minimum compressed height when moving to prevent instability. It is also recommended the user remove all computer equipment or other accessories to prevent possible weight imbalance or damage to equipment.
- Failure to follow the guidelines above may result in property damage or personal injury.

Heavy Load

- This product must be anchored to wall to ensure stability & safety.
- It is the owner and installers responsibility to ensure that the wall type and construction is of sufficient strength to carry the loads of any wall mounted products and their contents.
- Failure of the wall and anchors to support all imposed loads may result in property damage or personal injury.
- BRC can provide size and empty weight of its products only. As wall blocking is considered a building construction process, BRC cannot provide recommendations in this respect and cannot be responsible for damage or injury that may occur as a result of improper installation and/or blocking.

Load Bottom Drawer First!

- · Operate one drawer at a time.
- · Unit may tip if loaded incorrectly.
- Unit should be attached to a wall or other furniture to reduce tipping hazard.
- · Always load the heaviest files in the bottom drawer.
- · Failure to follow the guidelines above may result in property damage or personal injury.

