 

 
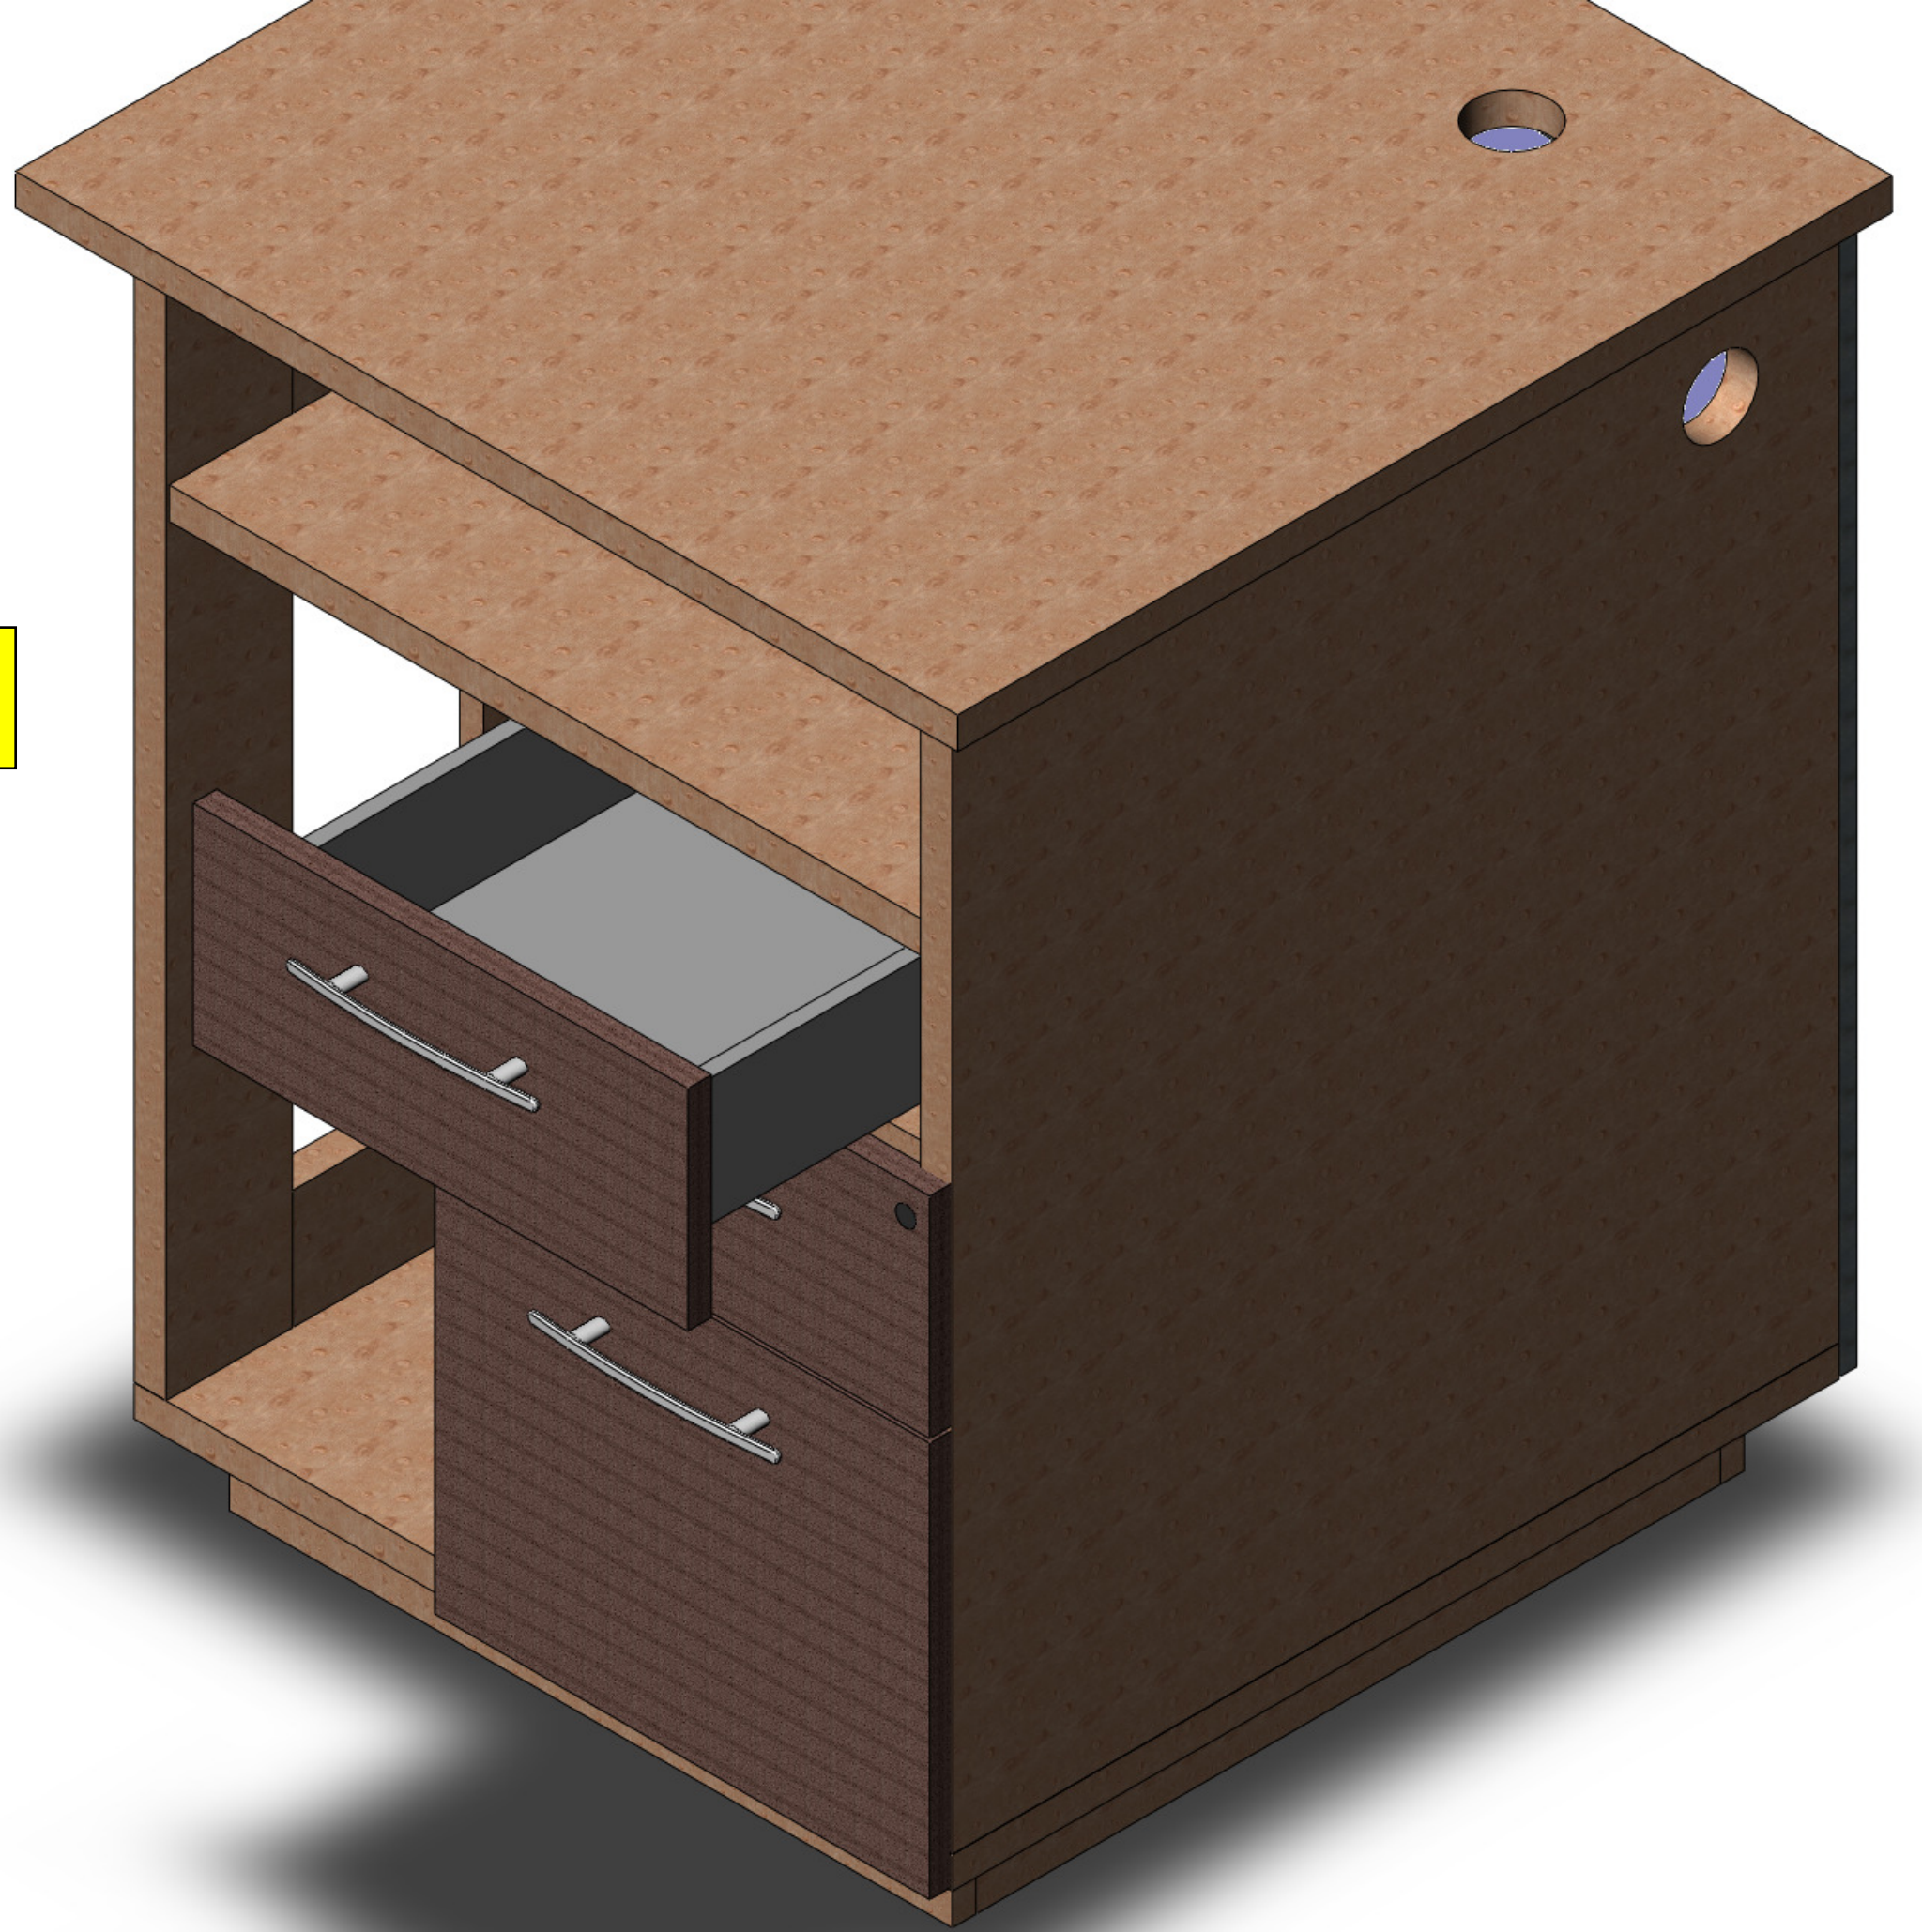




Pull Out Top Drawer from
MultiMedia Cabinet




Use # 5_5/8" Flat Head
Screw(X2) to secure Plastic
Tension Holding Plate to
the Inside front of Drawer.

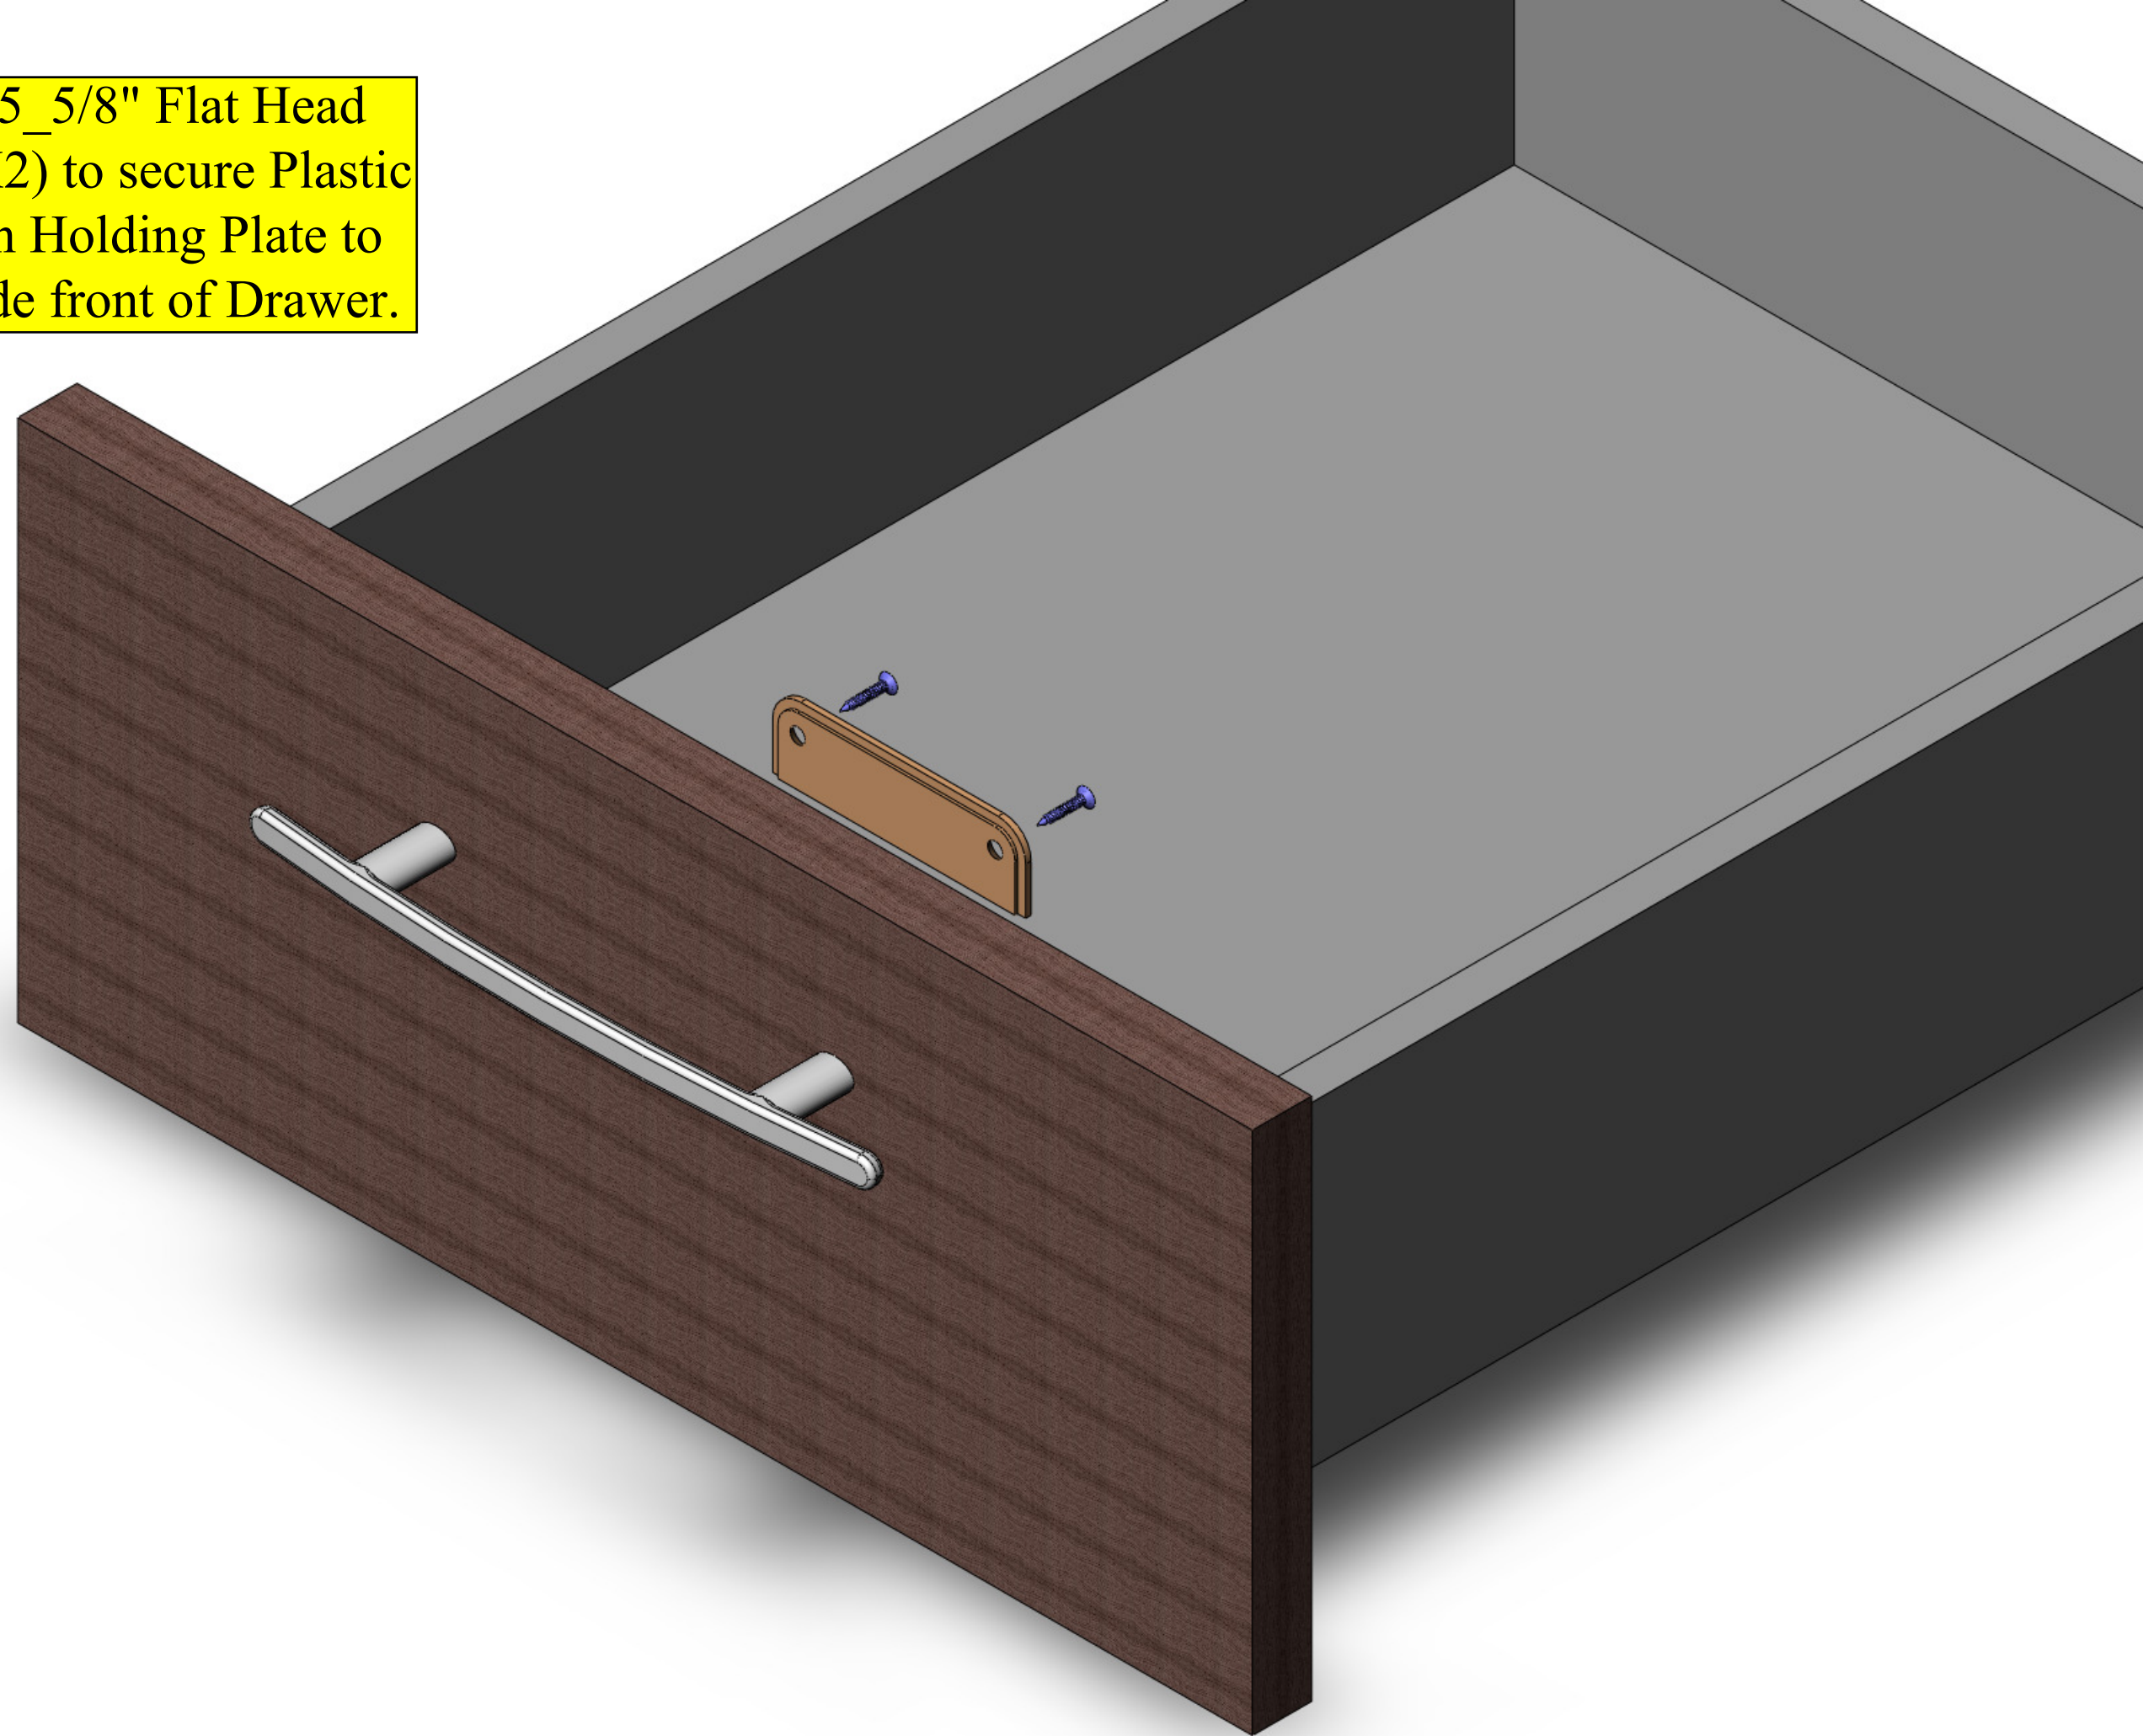

 

Place the Plastic Tension Holding Plate to the Center of Drawer

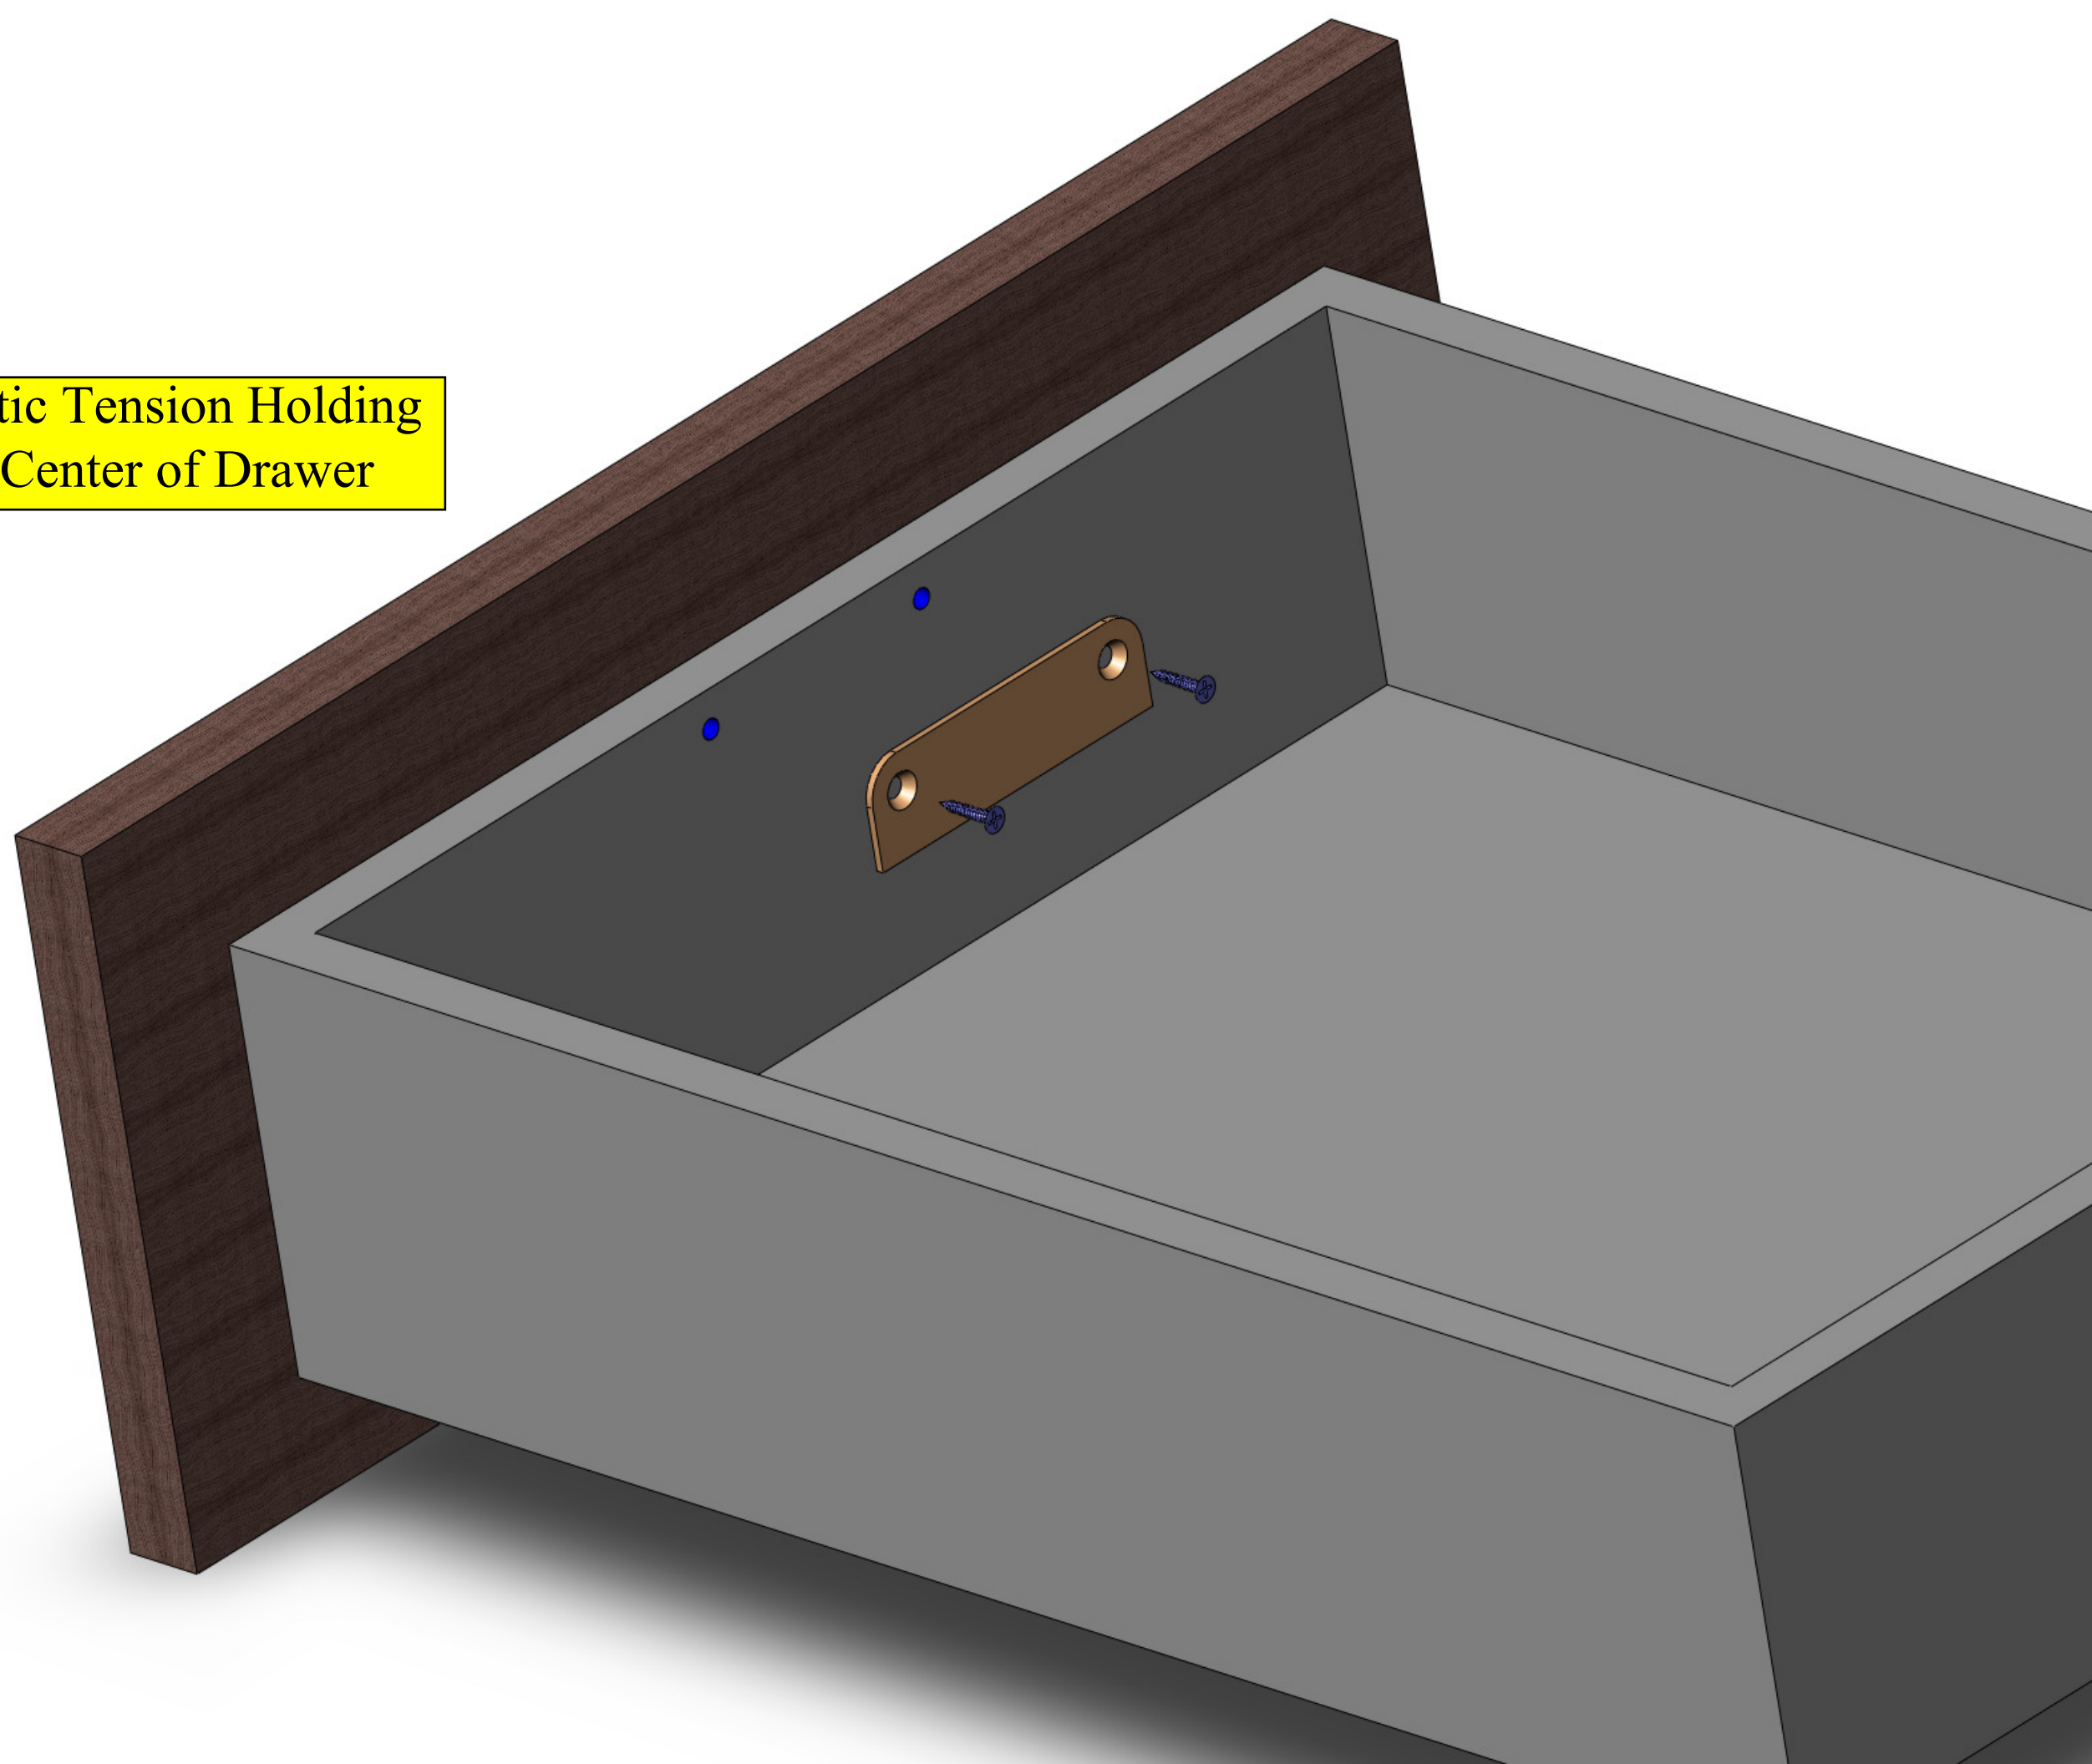

Keep the Top Surface of Plastic
Tension Holding Plate Flush
with Edge of Drawer.

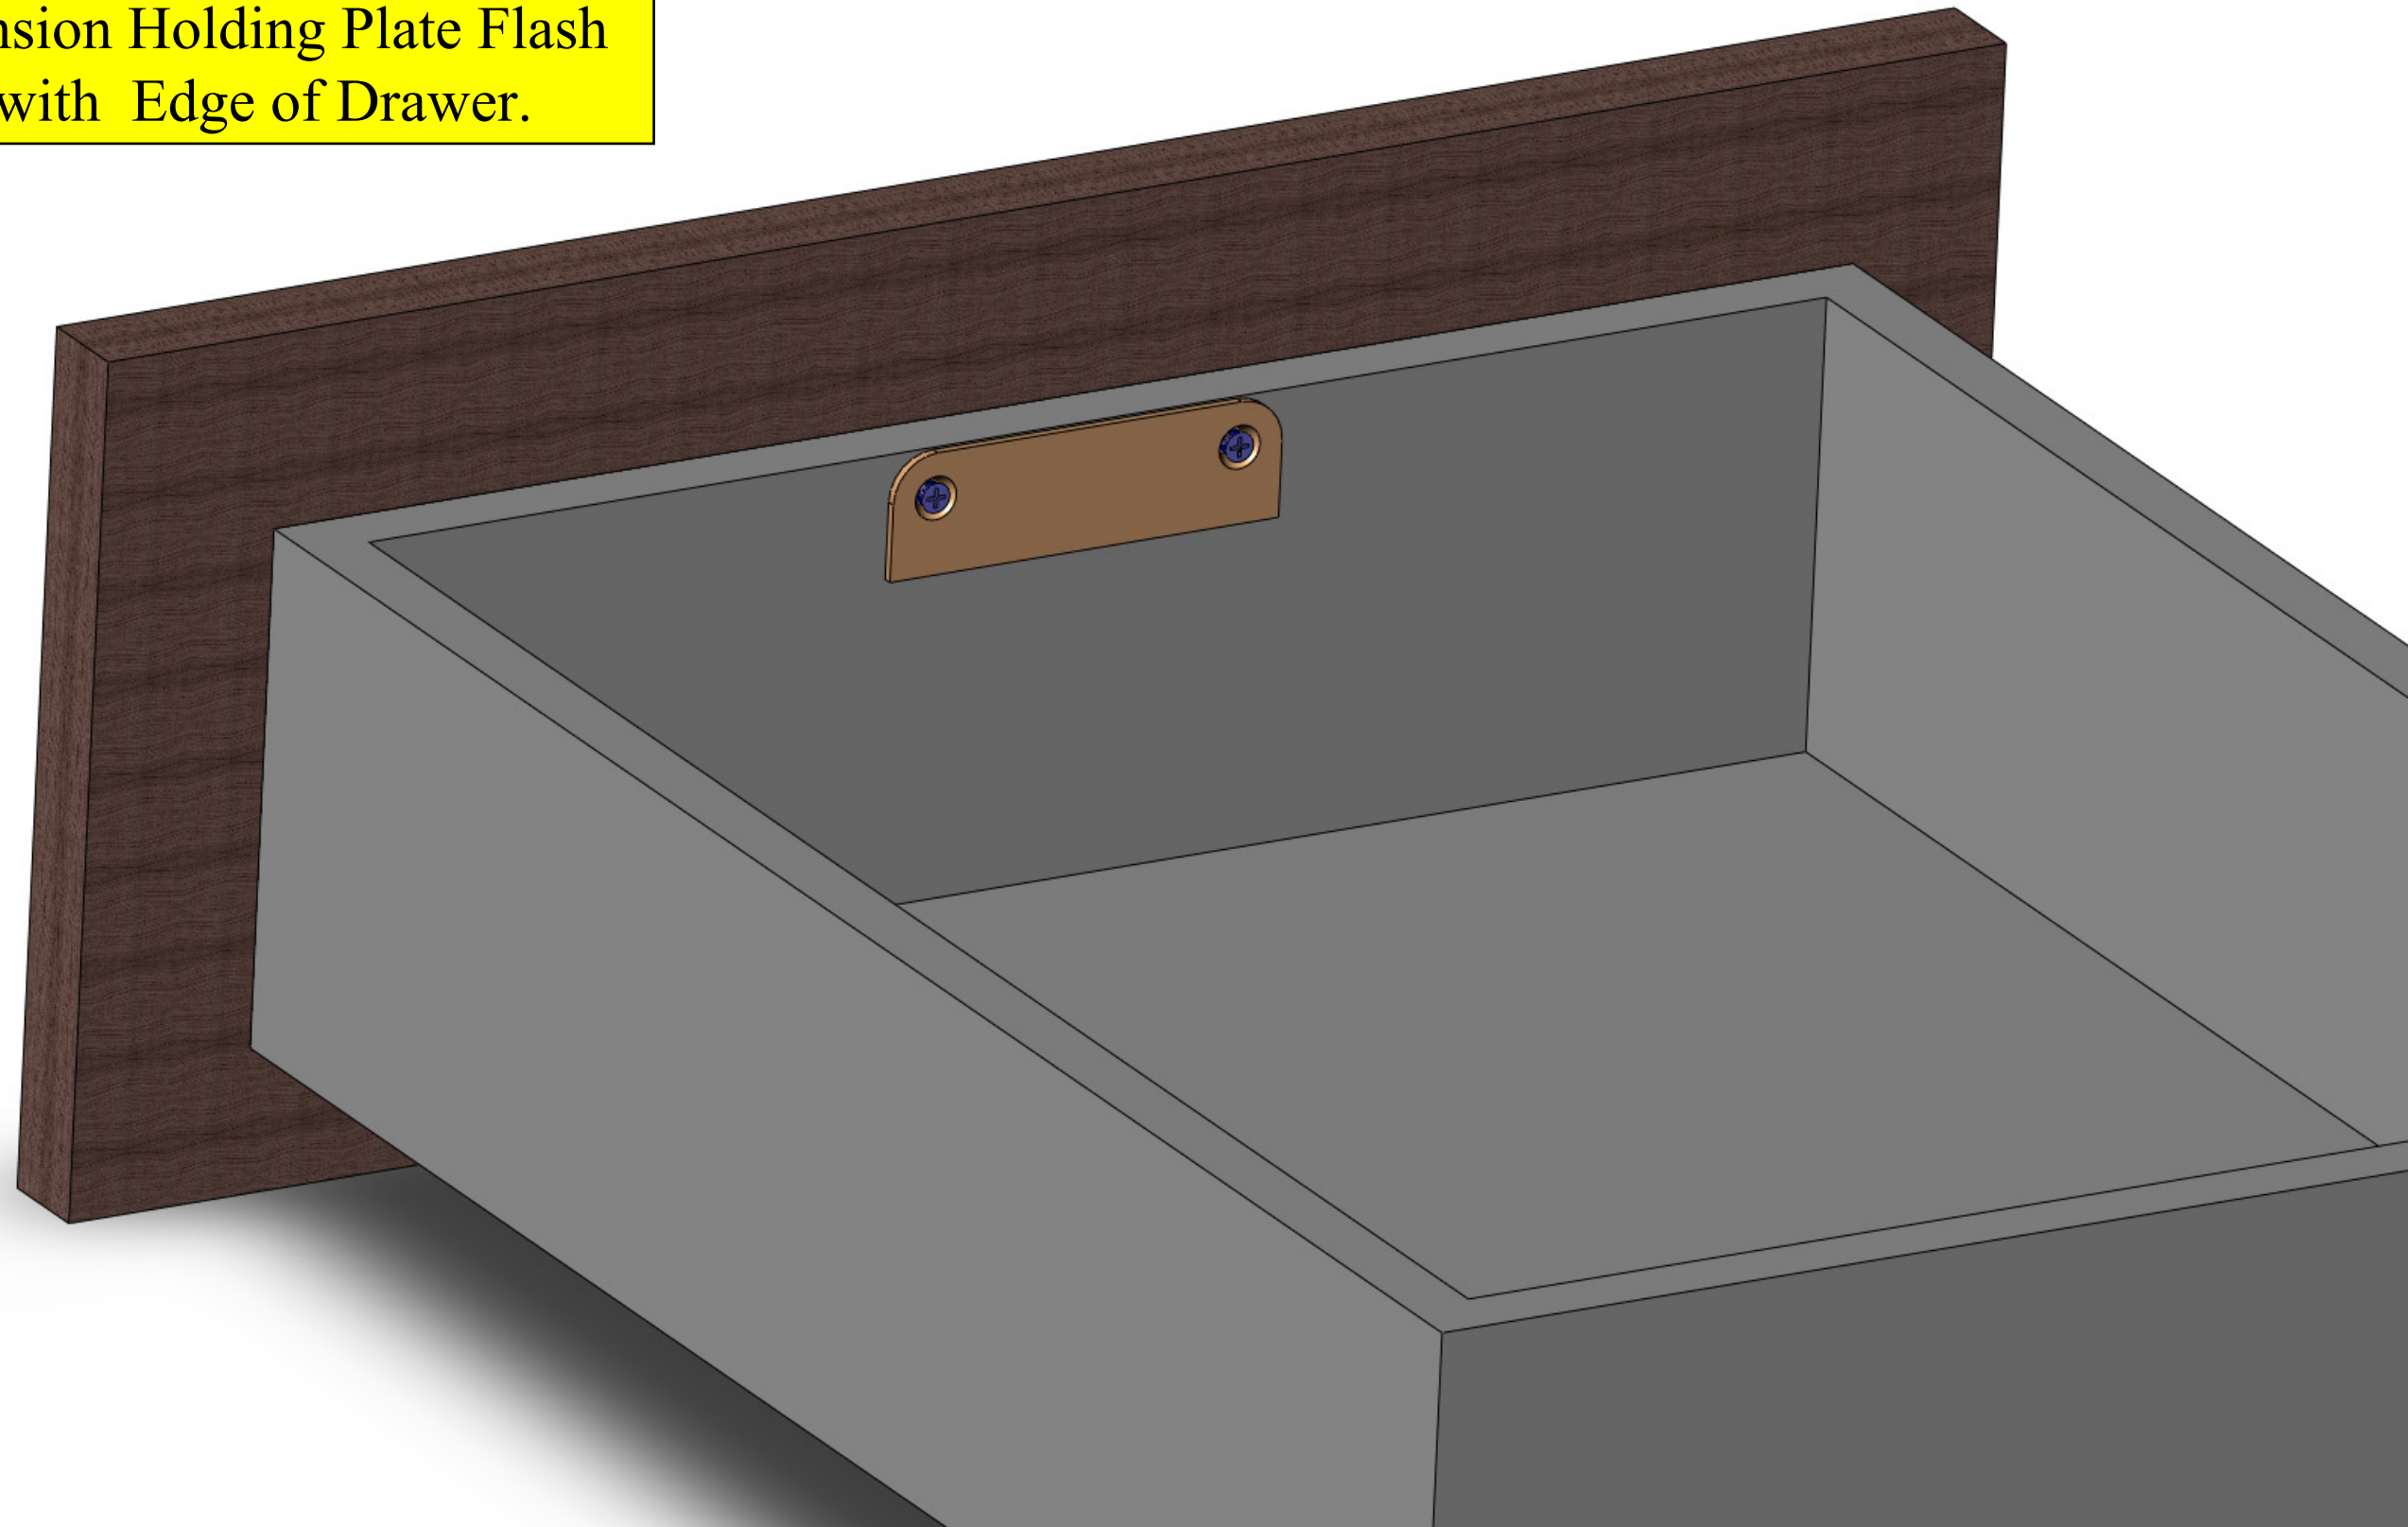

Firmly Slide Pencil Tray down
to Plastic Tension Holding Plate

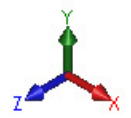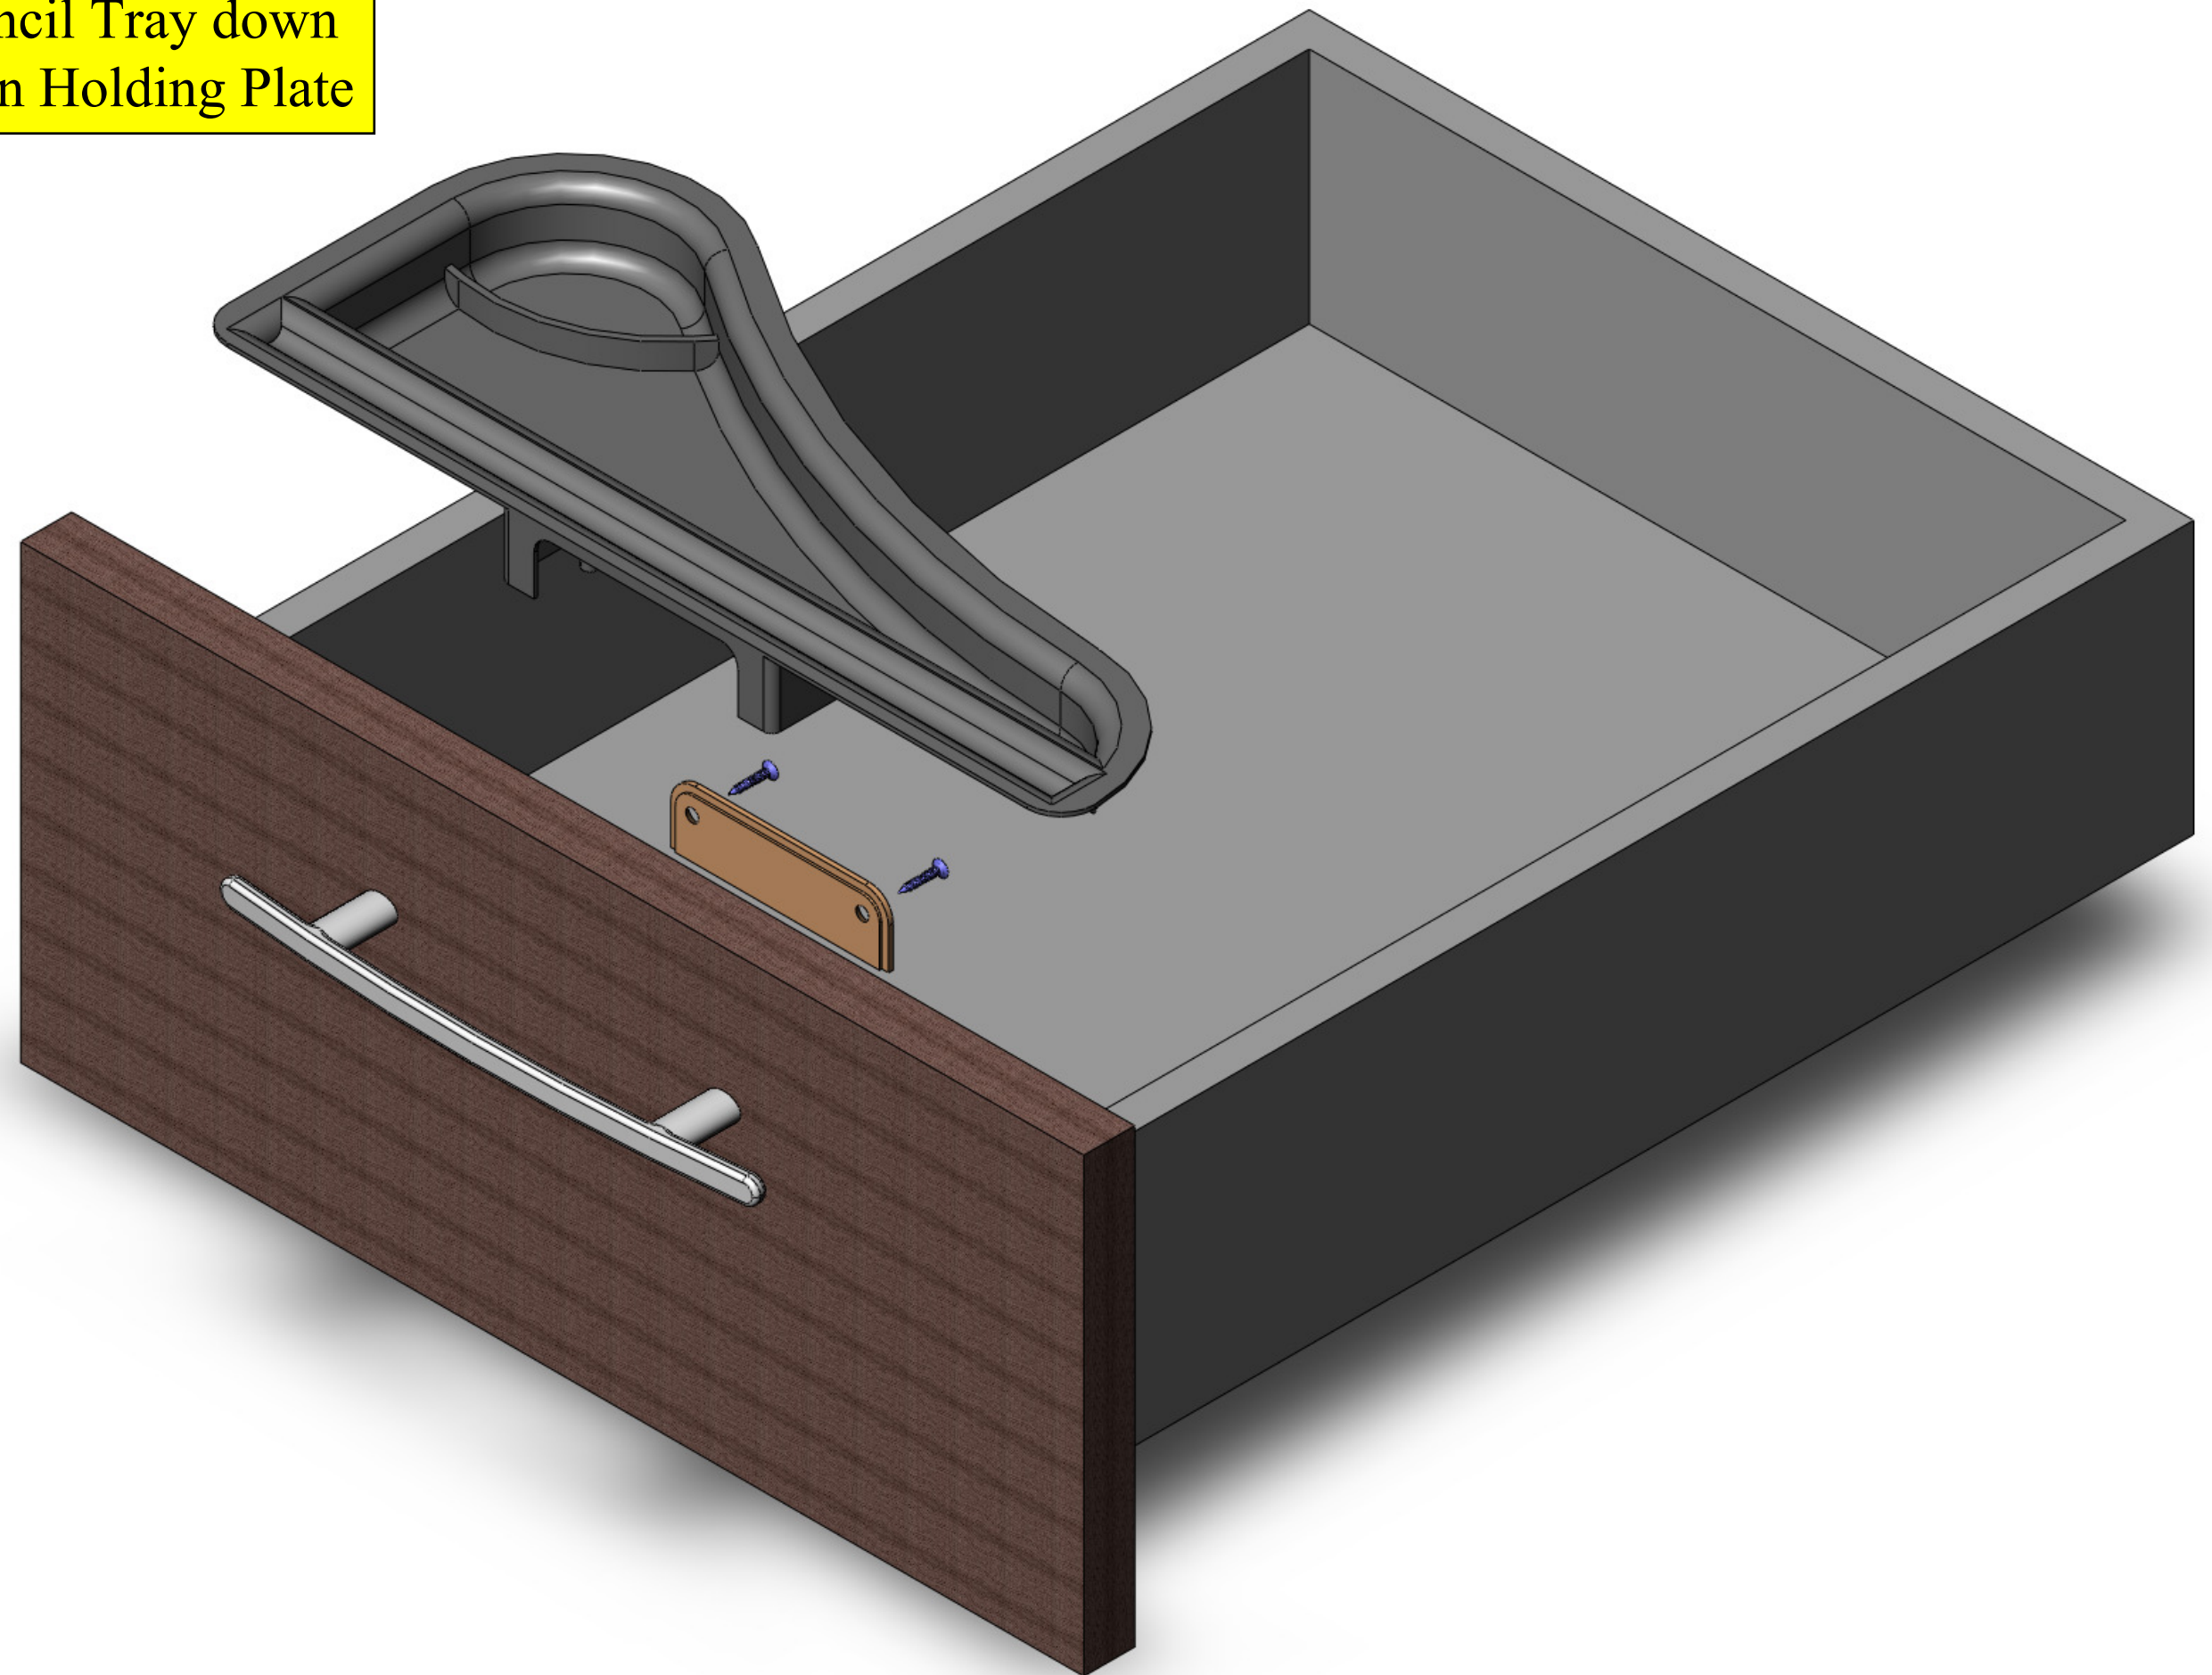

Final Position

