


Fabric Privacy Panel

Product Assembly and Installation Guide



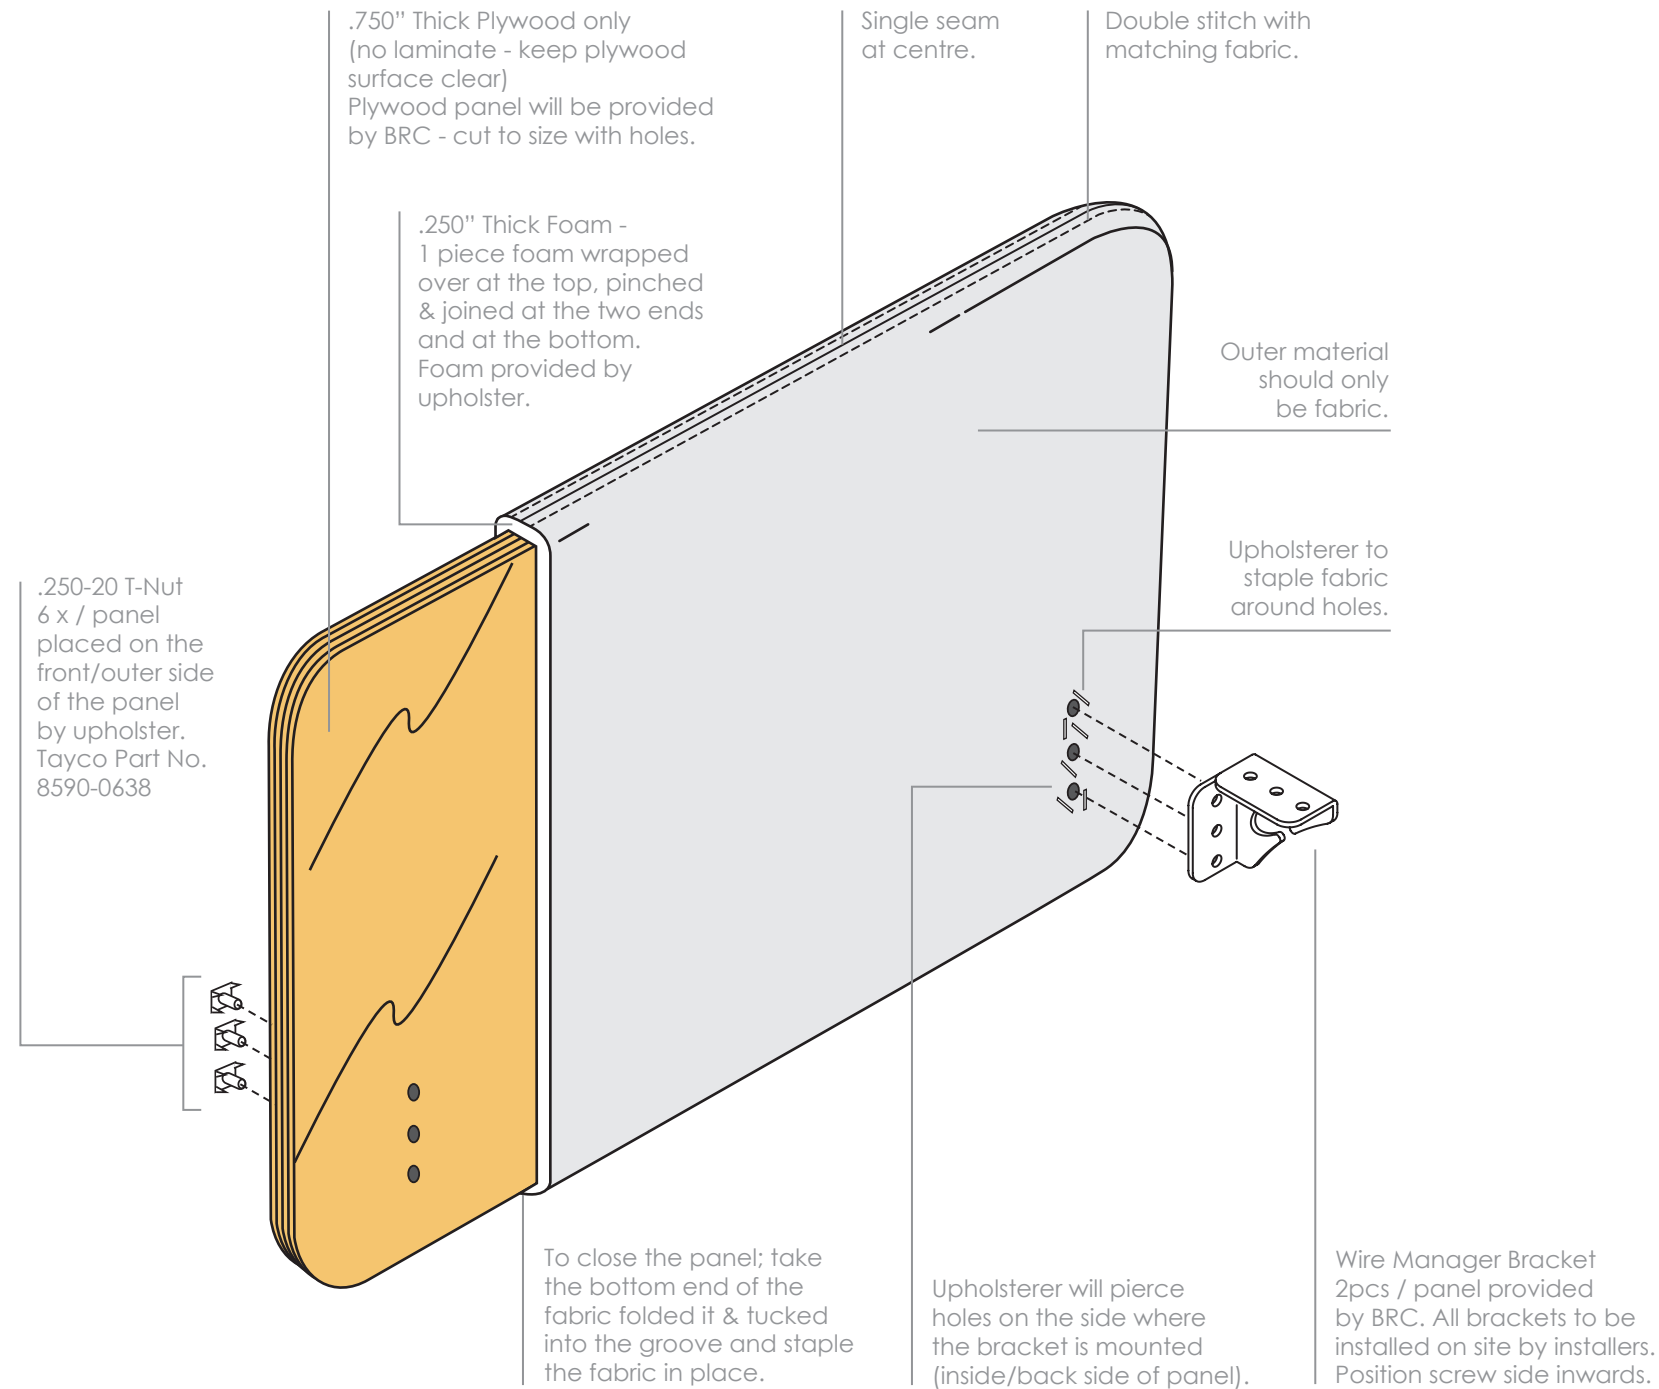

Materials & Assembly

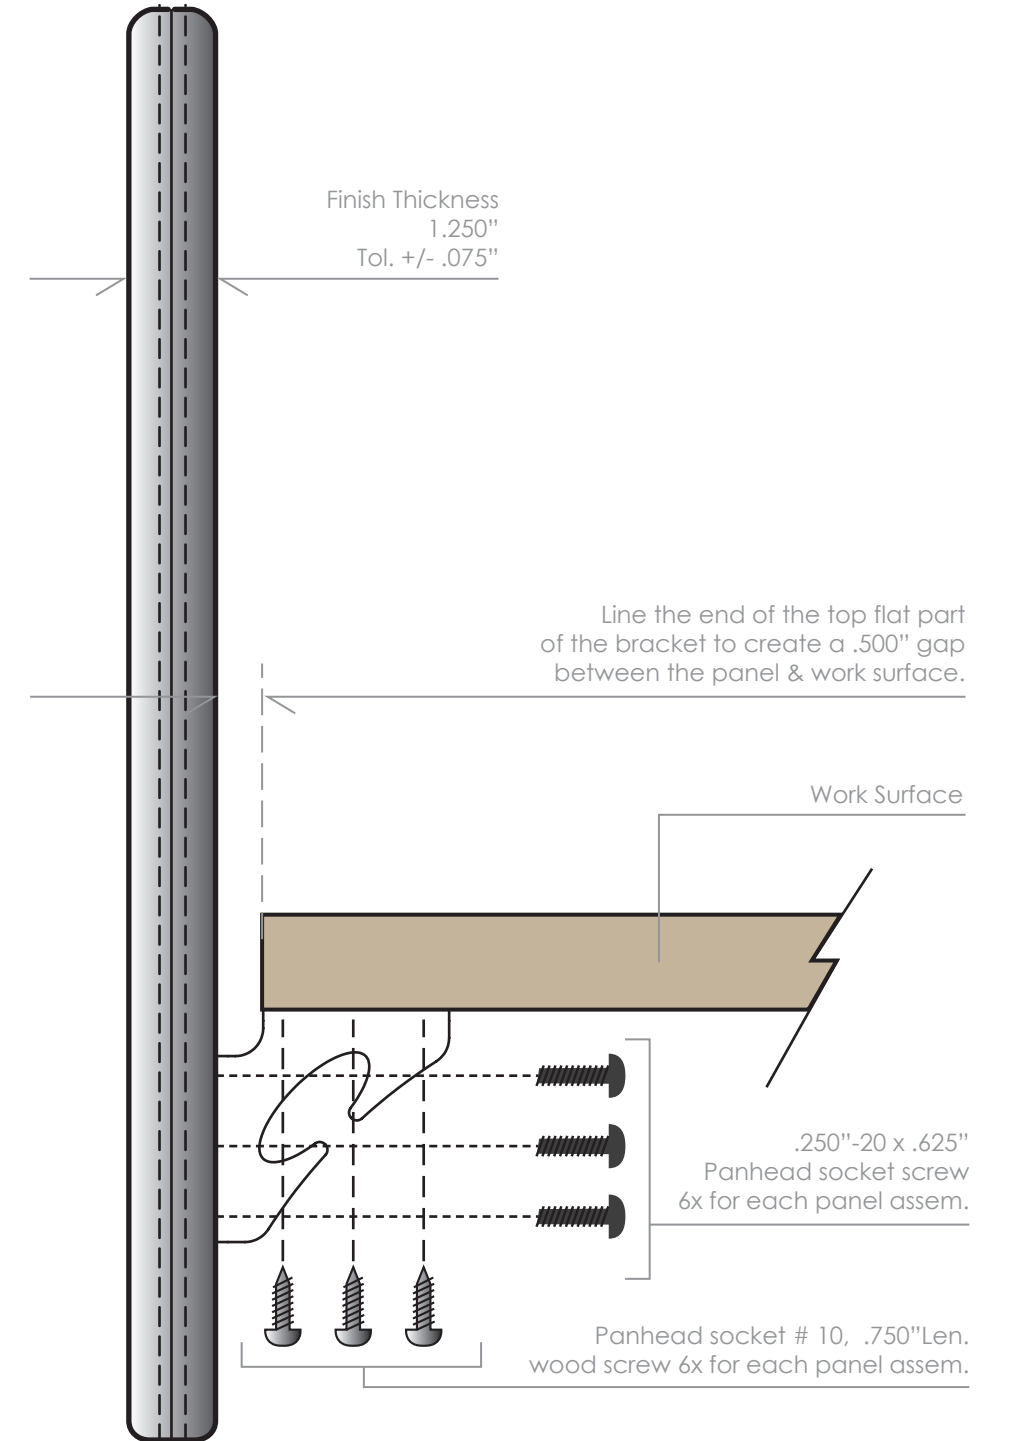

Installation of Panel

Drawing Title Instruction Assem. for Upholstered Panels/Dividers

Product Name Divider Panels

Product Code 00000000

Date 12 April 2023

Drawn By RC

Product Assembly Info & Installation


24 Armstrong Ave.
Georgetown, ON L7G 4R9
T: 905.873.8509
Toll Free: 1.877.260.4309

abrc
brc.group

1

Place panel onto a flat clean surface with the side with holes facing you. Be sure that the side with the holes are closest to you.

2A

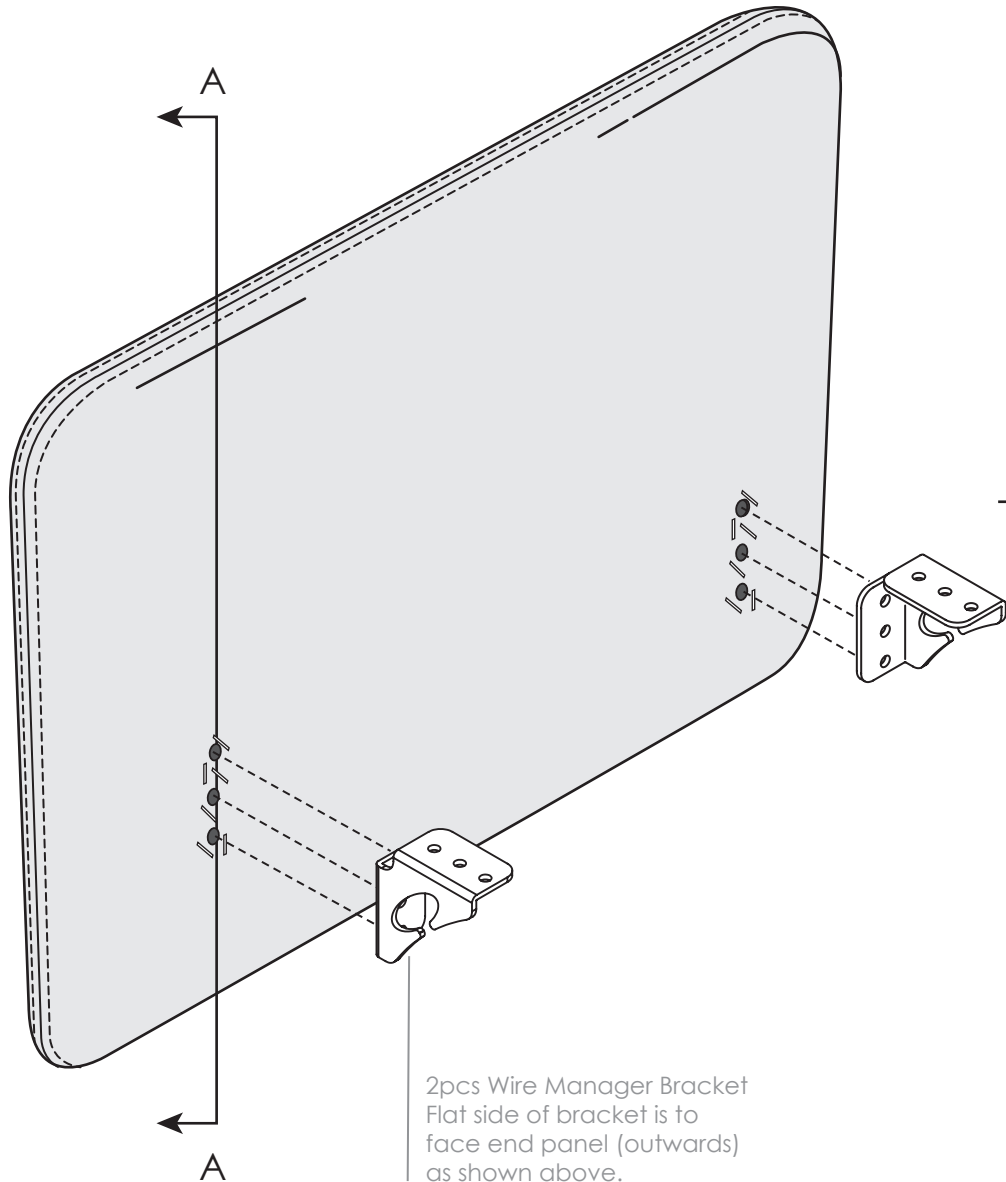

3

Line the end of the top flat part of the bracket to create a .500" gap between the panel & work surface.

Work Surface

2B


3x (pcs) 1/4-20 x 5/8" socket machine screw for each bracket. Be sure to place screw through the holes by hand, turning the screw until it catches the nut inside the panel. Be gentle when using a machine to tighten screws.

3

Panhead socket # 10, .750"Len. wood screw 10x for each panel. Position your panel with bracket as shown above. Mark your hole location then use wood screws provided to secure the panel and bracket.



The T-nuts can be found close to the lower corners. To locate them you will be able to feel the heads with your hands, which is the outside end. You need to screw from the opposite side where you don't feel the heads. The photos shown is what the T-nut heads look like.

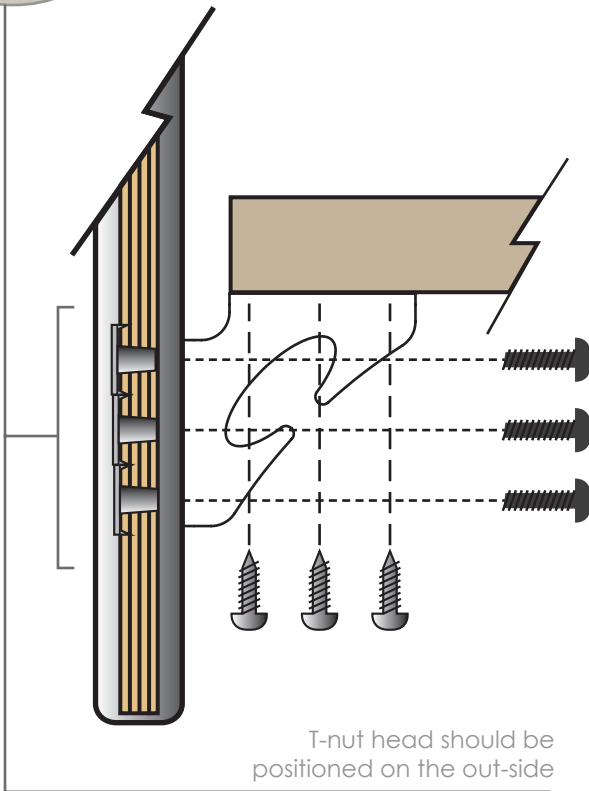

Section A-A