



3 LEG QUICK CONNECT DESK - UNDER 46"D

ASSEMBLY INSTRUCTIONS

STEP 1: Take out the Framework pieces from carton and extend the outer frame sections.

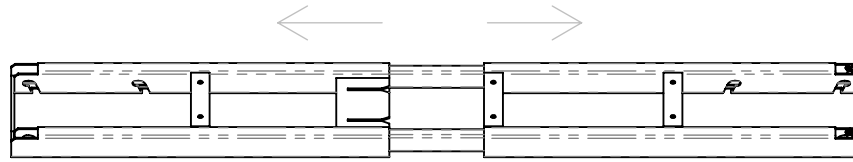


STEP 2: Insert Lifting column into frame keyway leaving pre-installed bolts M6x10 in place. Lock lifting column into frame by installing with M6x12 bolts (x6).

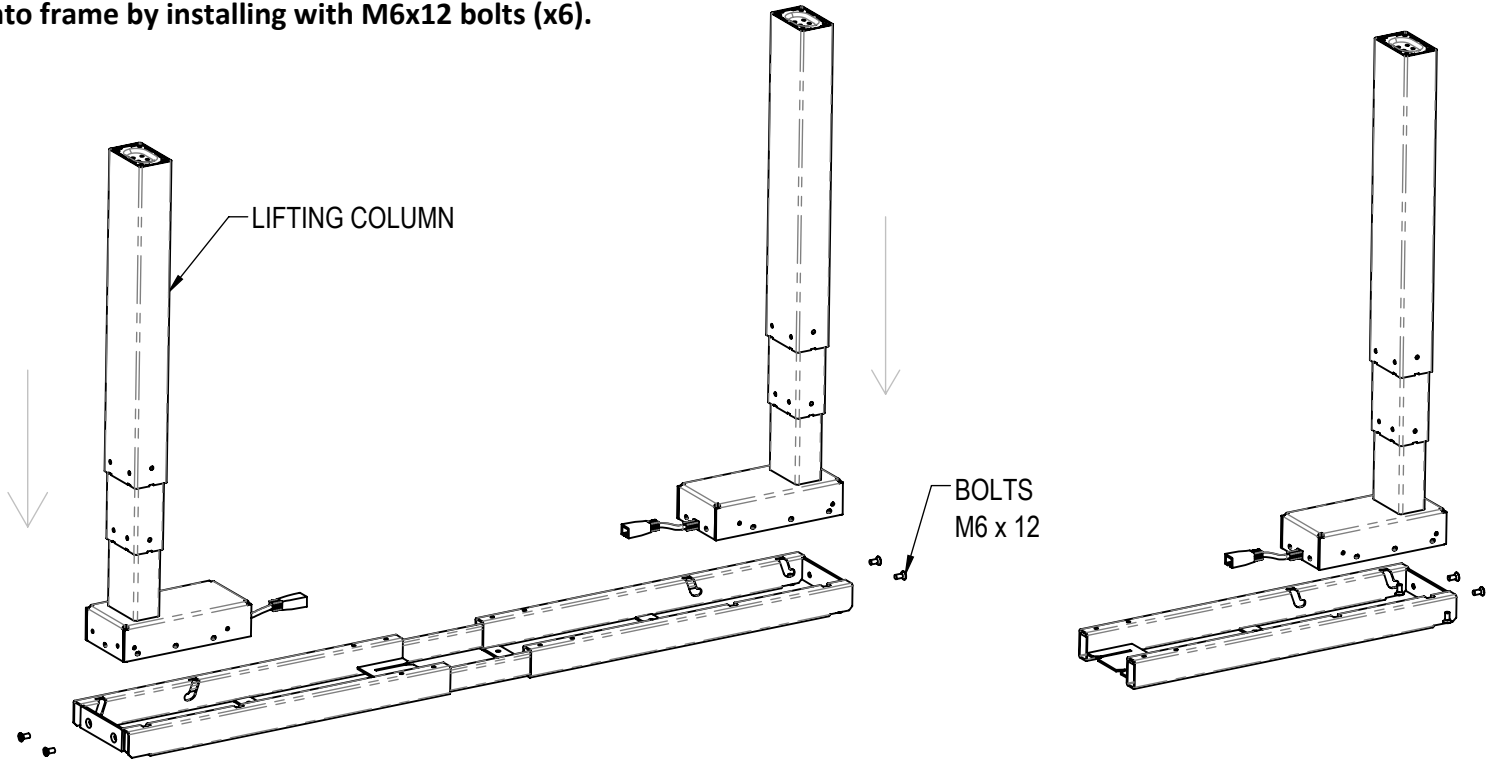


STEP 3: Install leveling glides (x6) to foot (x3).

STEP 4: Install foot (x2) to lifting column and foot (x1) with lifting column. Secure with M6x16 bolts (x12) and star washer (x12).

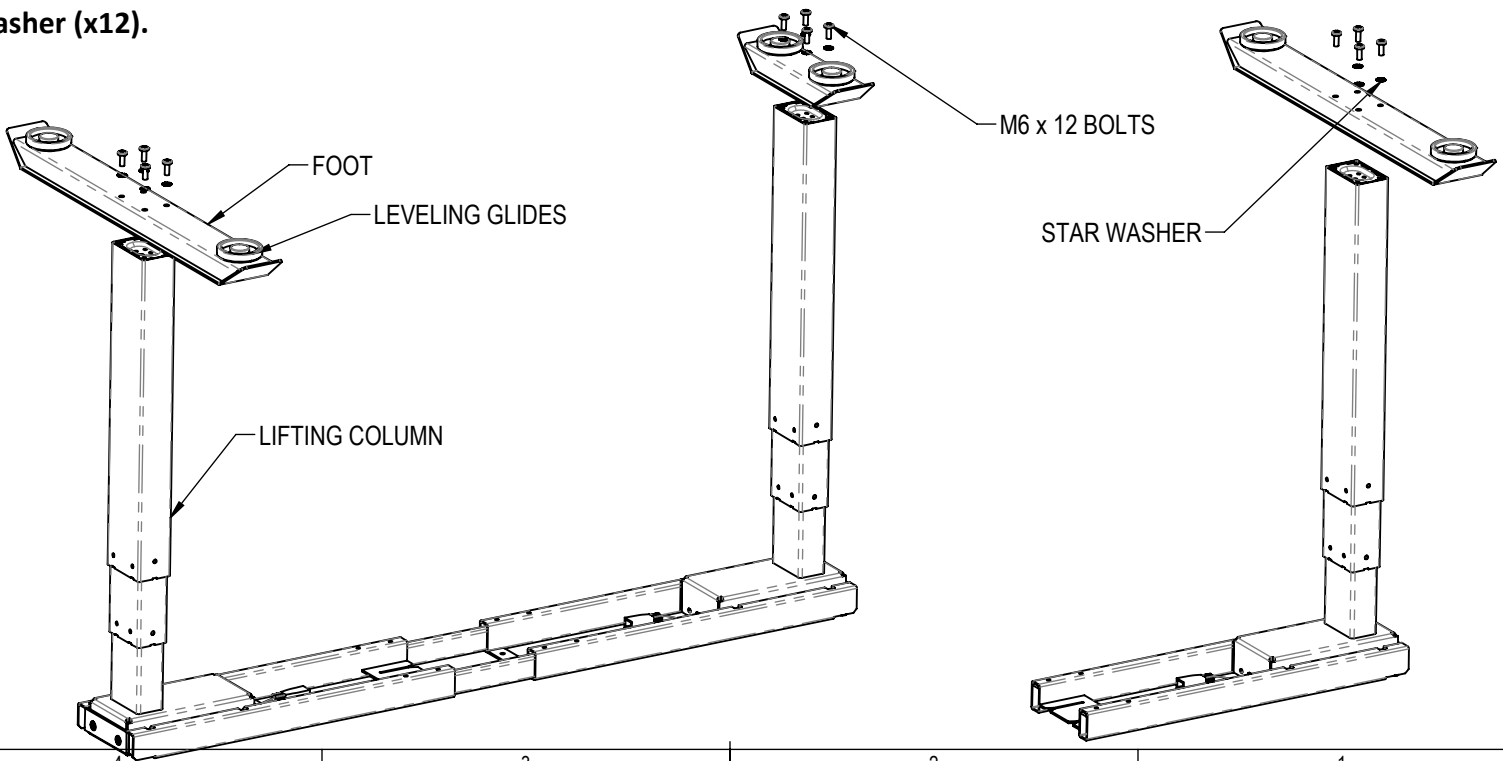


3 LEG QUICK CONNECT DESK - UNDER 46"D ASSEMBLY INSTRUCTIONS

STEP5: Install the side support to framework with M6x12 bolts (x6).

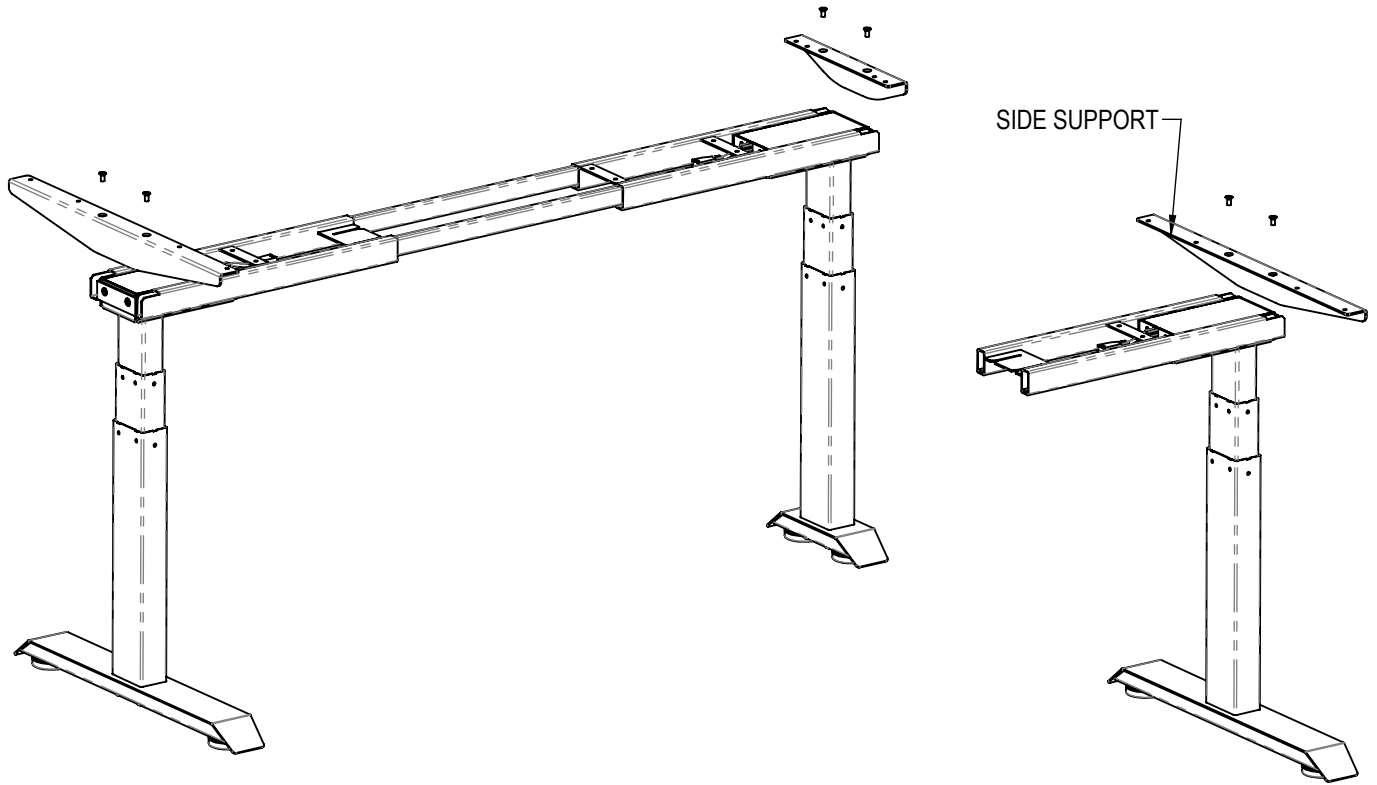

STEP 6: Set width of base according to the width of the table top. Tighten M6x10 bolts (x8) to set the base frame to the correct width.

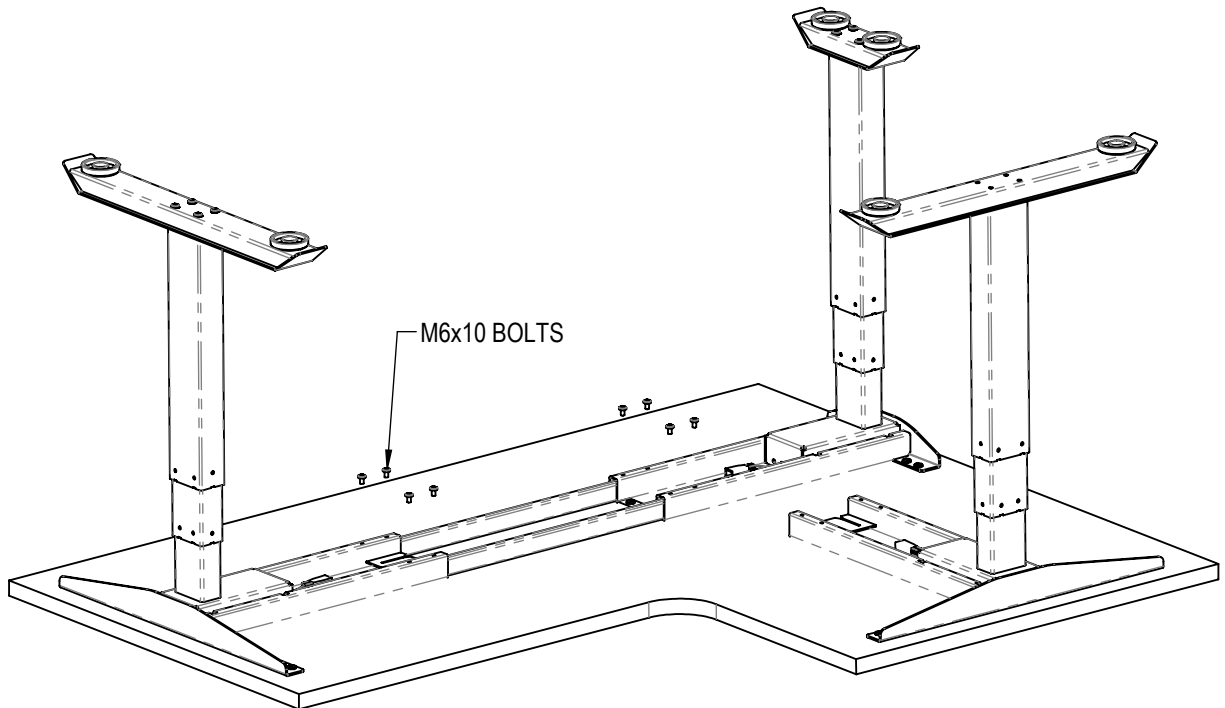

4



3

2

1

3 LEG QUICK CONNECT DESK - UNDER 46"D ASSEMBLY INSTRUCTIONS

STEP 7: Hang the control box on the base. Stick rubber bumper on top of lifting column and extendable tube. Using 1/4-20x3/4 screws (x24) to attach the base to the table top.

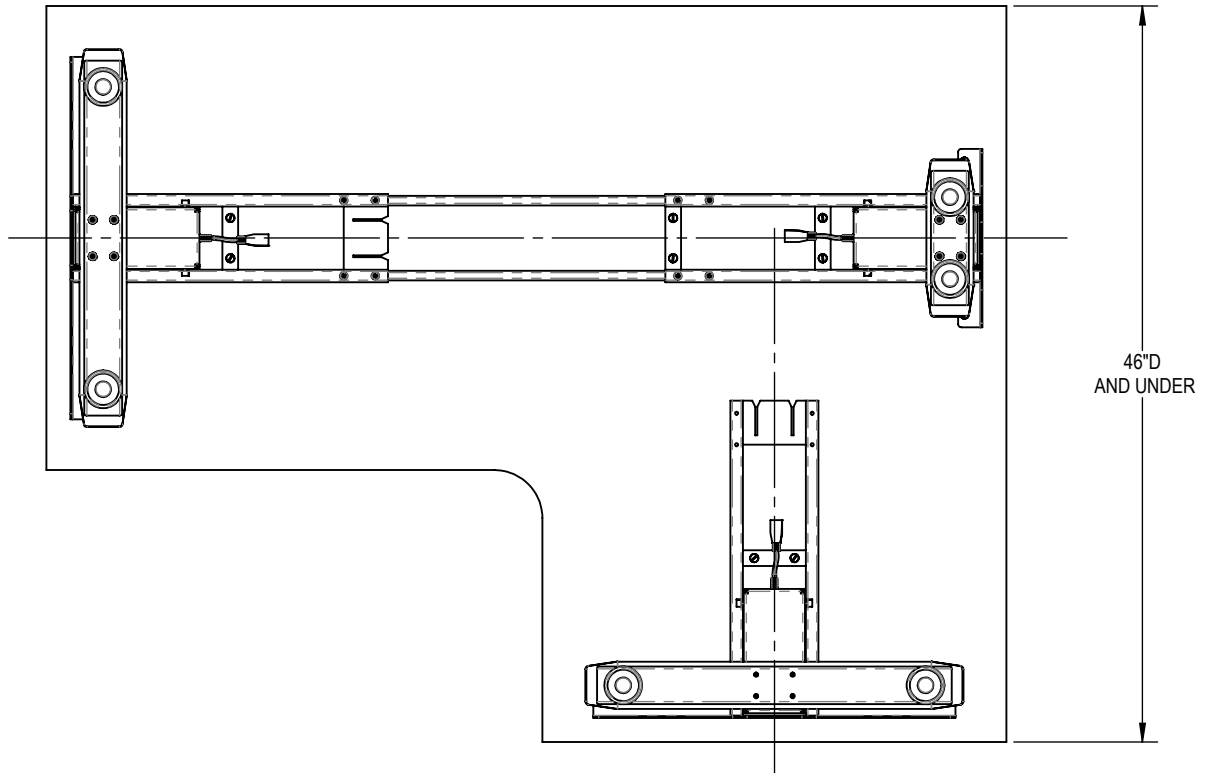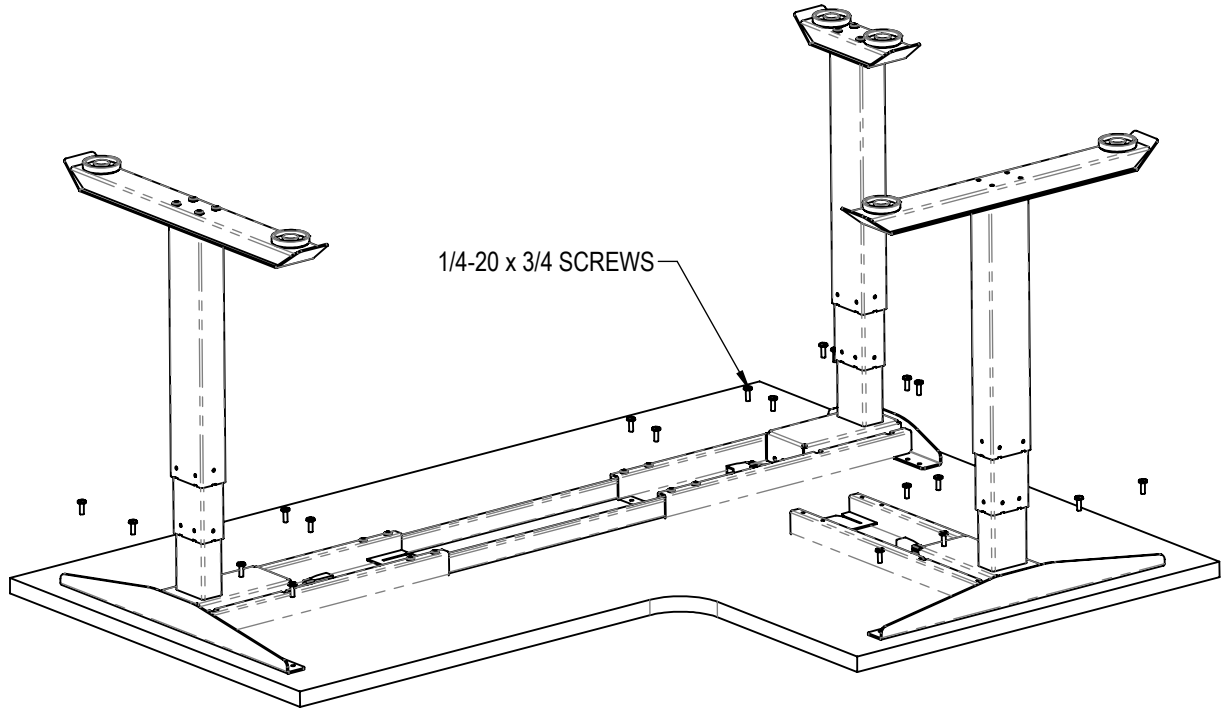

4

3

2

1