



INSTALLATION INSTRUCTIONS

CONVERTING 3 LEG T-STYLE BASE TO 3 LEG C-STYLE BASE


STEP 1: REMOVE AND DISCARD THE SIDE SUPPORT SHORT (ITEM#7) AND SIDE SUPPORT LONG (ITEM#3) FROM THE FRAMEWORK ON THE T-LEG CONFIGURATION.

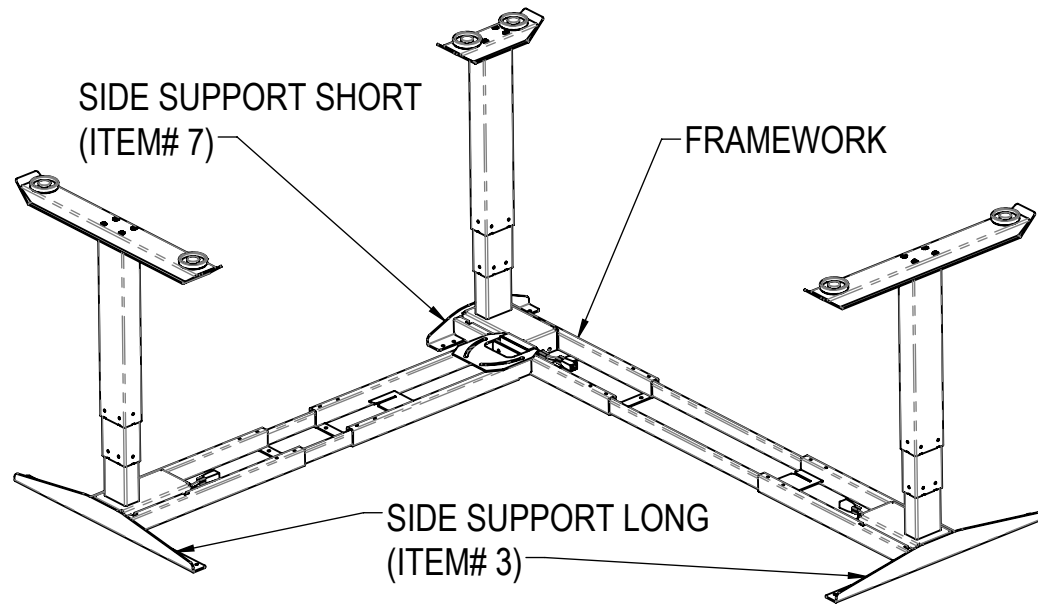


STEP 2: REMOVE AND DISCARD THE CENTER BRACKET BY UNSCREWING THE THUMB SCREWS.

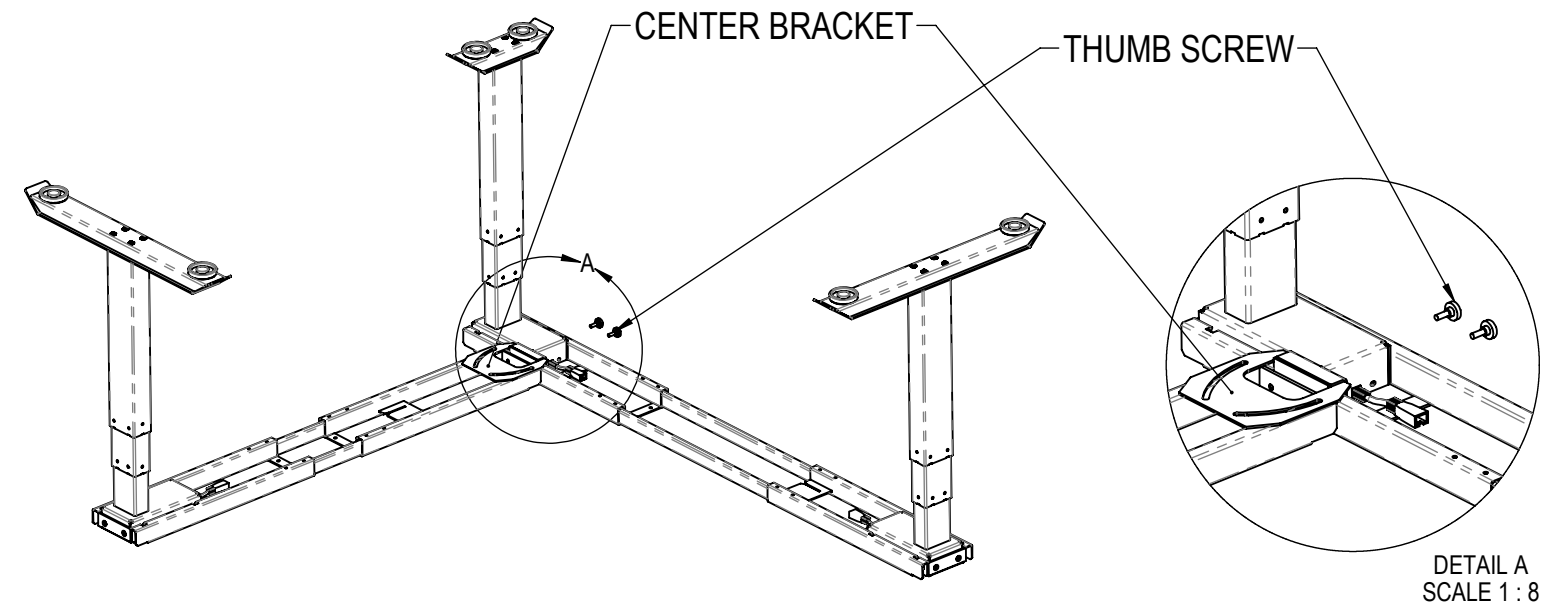

STEP 3: UNSCREW BOLTS (ITEM# 19) AND WASHERS (ITEM# 18) FROM EACH T-FEET.

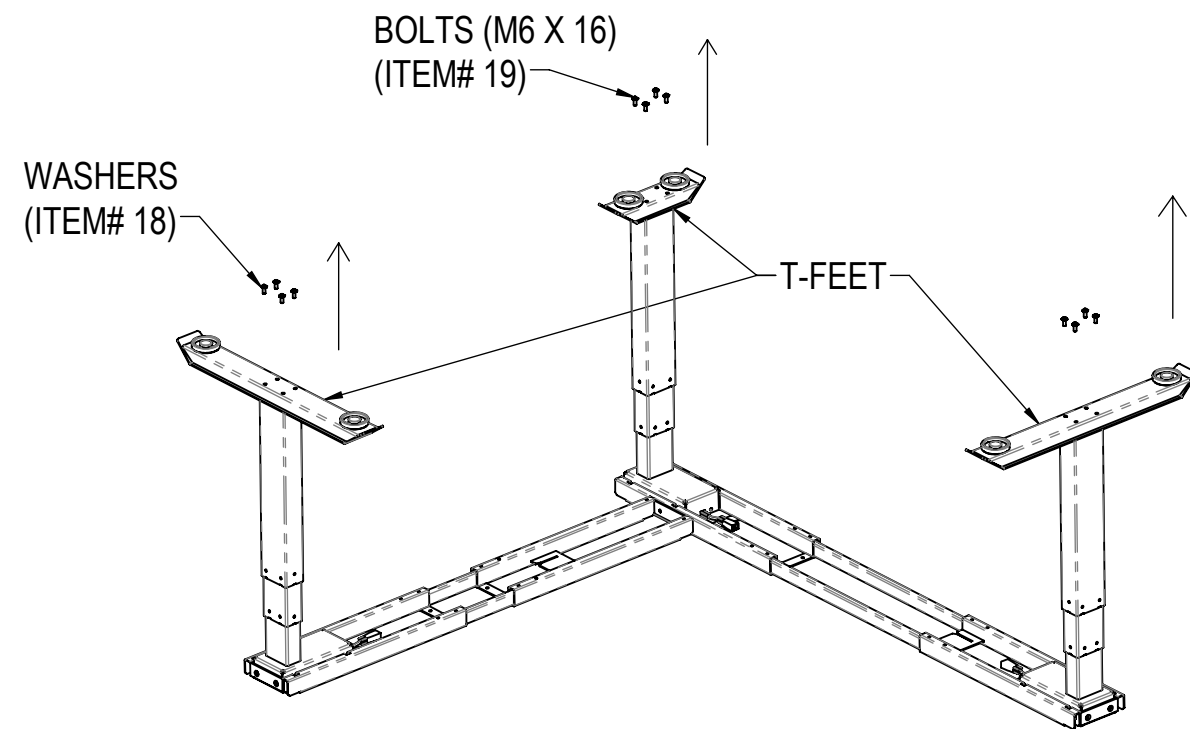


STEP 4: ATTACH THE C-FEET USING BOLTS (ITEM# 19) AND WASHERS (ITEM# 18).

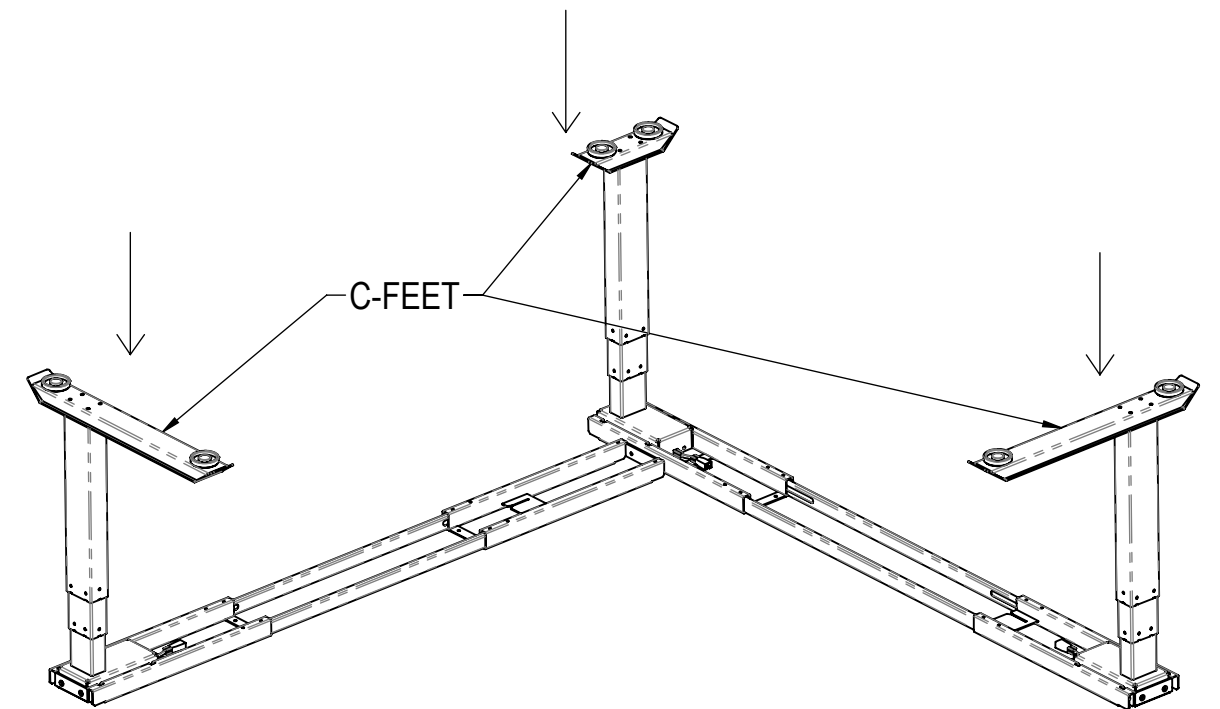


INSTALLATION INSTRUCTIONS

CONVERTING 3 LEG T-STYLE BASE TO 3 LEG C-STYLE BASE


STEP 5: INSTALL THE SIDE SUPPORT LONG (FOR C-LEG) INTO THE FRAMEWORK.

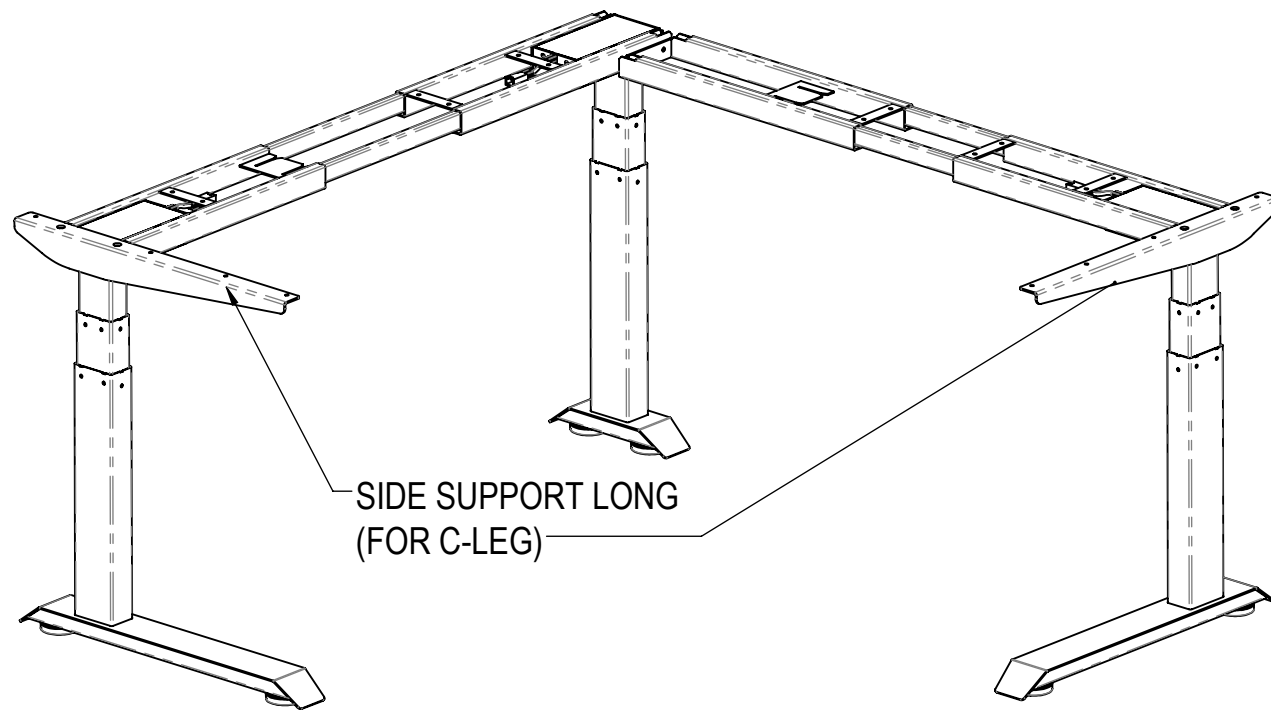

STEP 6: ALIGN BOTH THE FRAMEWORKS SUCH THAT IT'S FLUSH ON THE CORNER.

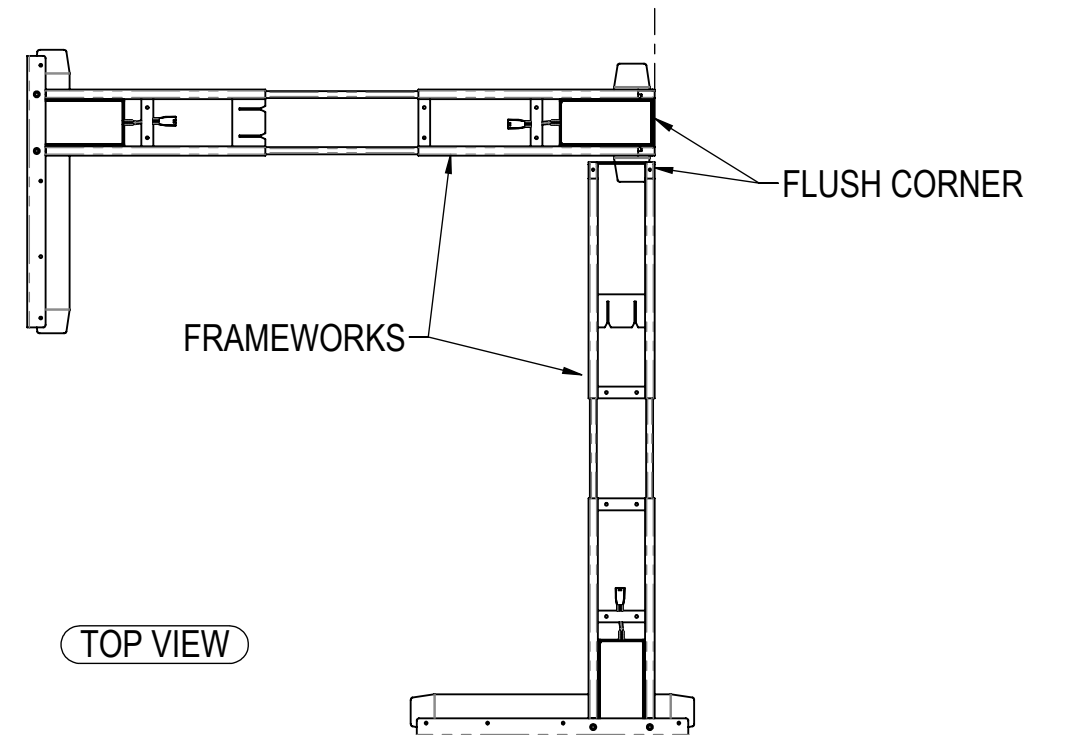

STEP 7: INSTALL THE L-BRACKET (ITEM# 8200179) USING M6 x 12 SCREWS ON FRAMEWORK# 1. ATTACH THE OTHER SIDE OF THE L-BRACKET TO FRAMEWORK# 2 USING M6 x 16 BOLTS, NUT AND WASHER.

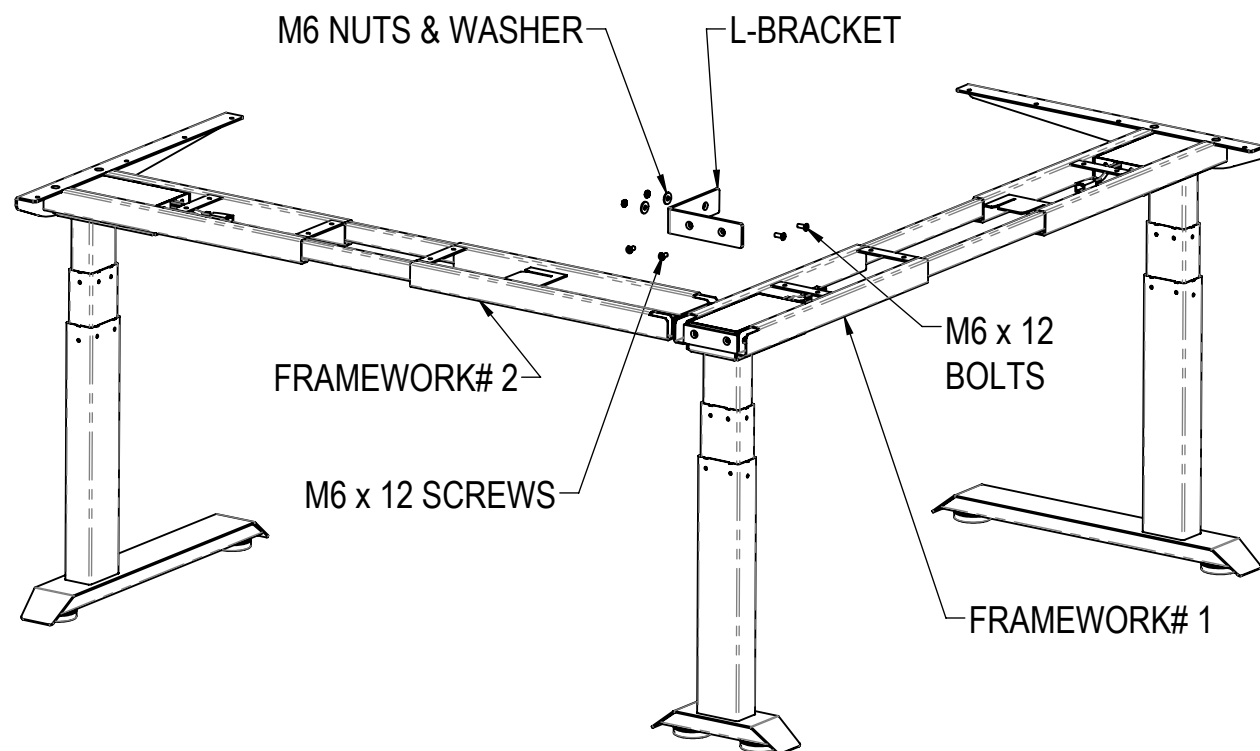

STEP 8: THE FRAMEWORK IS FULLY CONVERTED TO C-LEG CONFIGURATION. NOW ATTACH THE TOP.

