
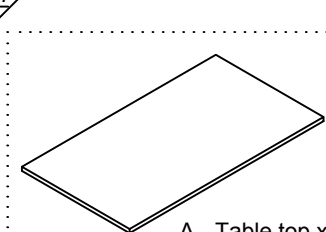



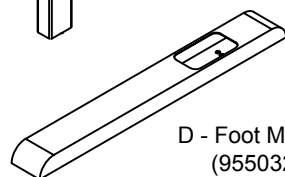

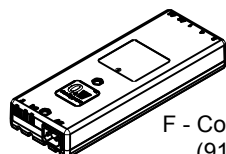
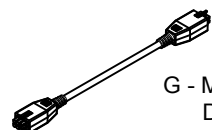





BOM




A - Table top x1

B1 - Bracket Top Mount Left
(9200218) x1B2 - Bracket Top Mount Right
(9200221) x1C - DL6 Leg
(9100188) x2D - Foot MEE/MCC set black
(9550325) x2E - Up/Down Gesture
Switch
(9100252) x1F - Control Box
(9100143) x1G - Motor Cable
DL4-1000
(9100035) x2H - M6x25mm,
Socket head cap
(9200925) x8I - Washer 5/16
external tooth
(9201000) x20J - Screw, M6x16mm,
pan head
(9200843) x12K - Screw, #10Ax1.0",
pan head Quad Zinc
(9200820) x34L - Screw, #8A, 5/8",
pan head
(9200897) x4M - Screw #8Ax1.25"
Pan head Quad Zinc
(9200835) x3N - Power cord US
black 3.2m Emotion
(9100036) x1O - Screw, #8A, 2.0",
flat head
(9200837) x2P - Wire management
1/2"x6"
(9450006) x1Q - Wire management
1.5"x6"
(9450019) x2R - Foot Grommet
(9301143) x2S1 - V-Support 54" long
provided with desks
wider than 72"
x2S2 - Screw, #10, 3/4",
Pan head
(9200838) x44

1




K

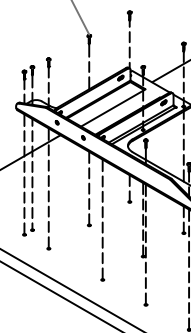



B2

A

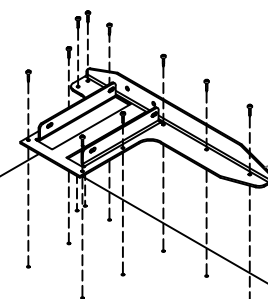

B1

2

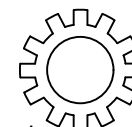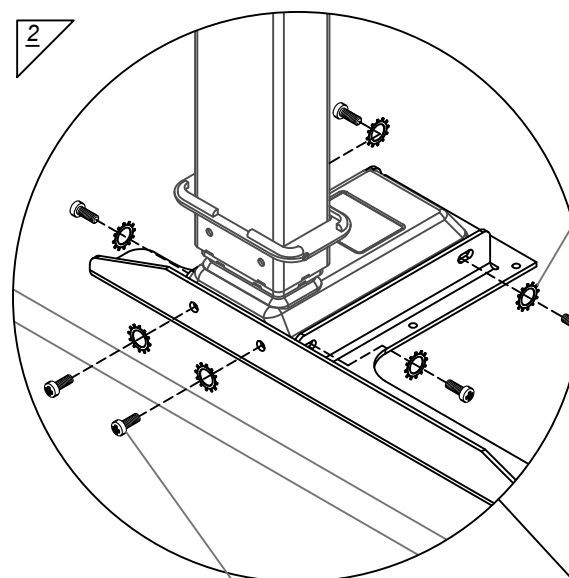

I

R

C



R

C

C

C

C

C

C

C

C

C

C

C


C

C


C

C


3

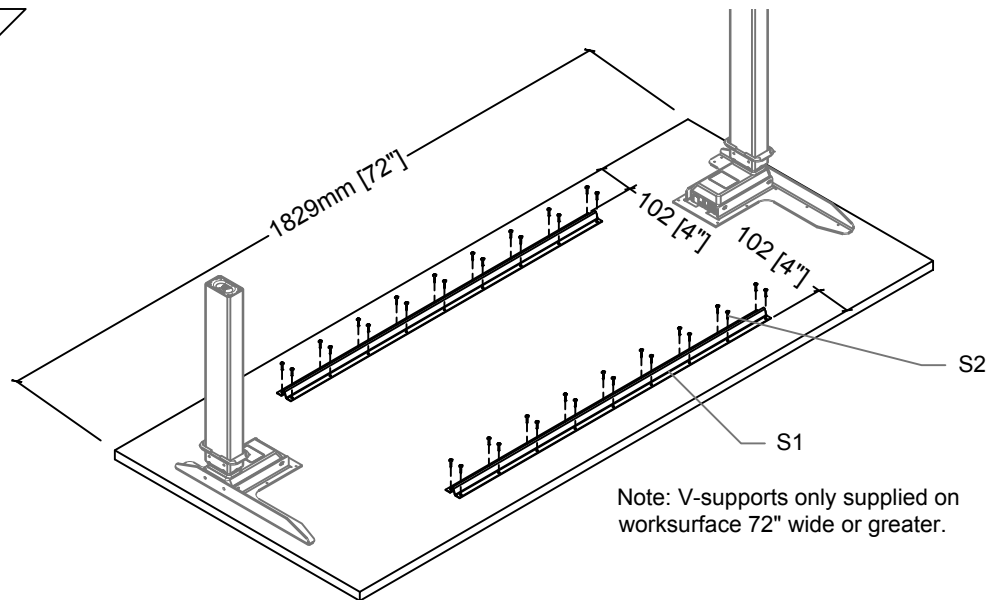


4

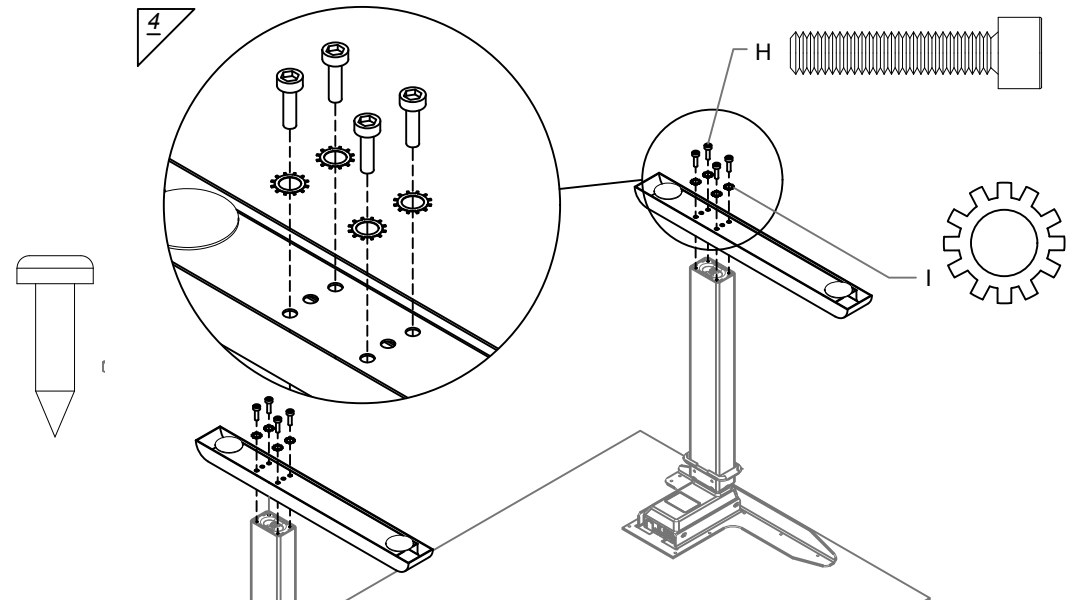


5

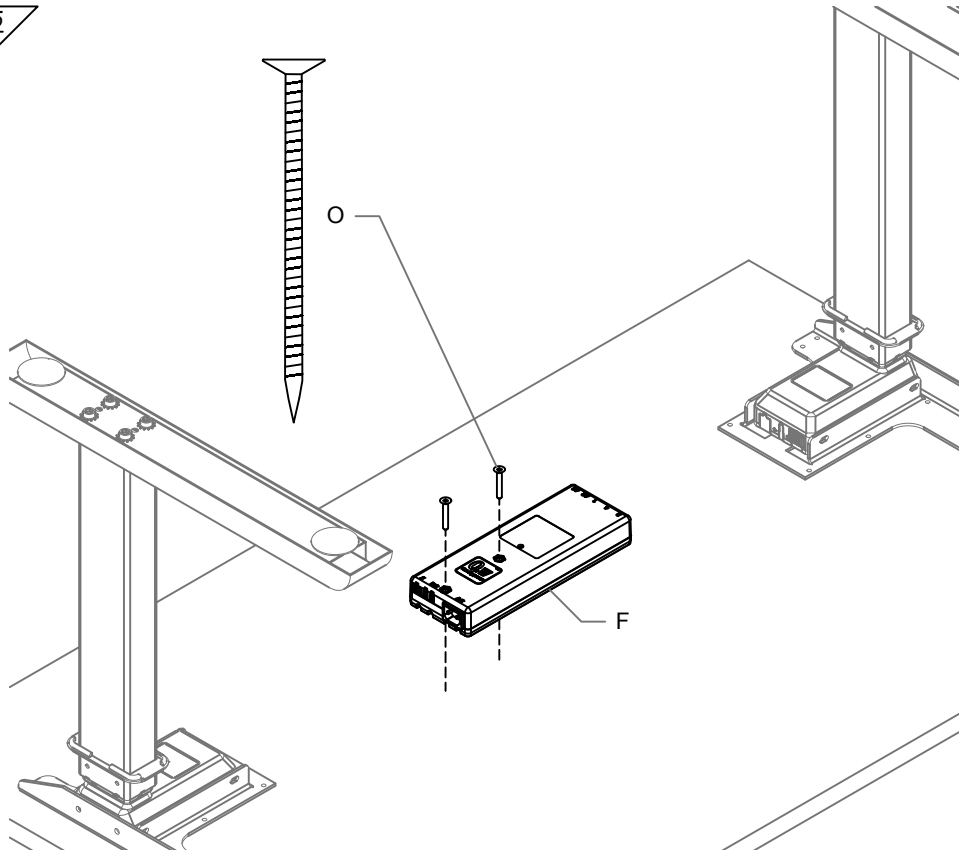


6

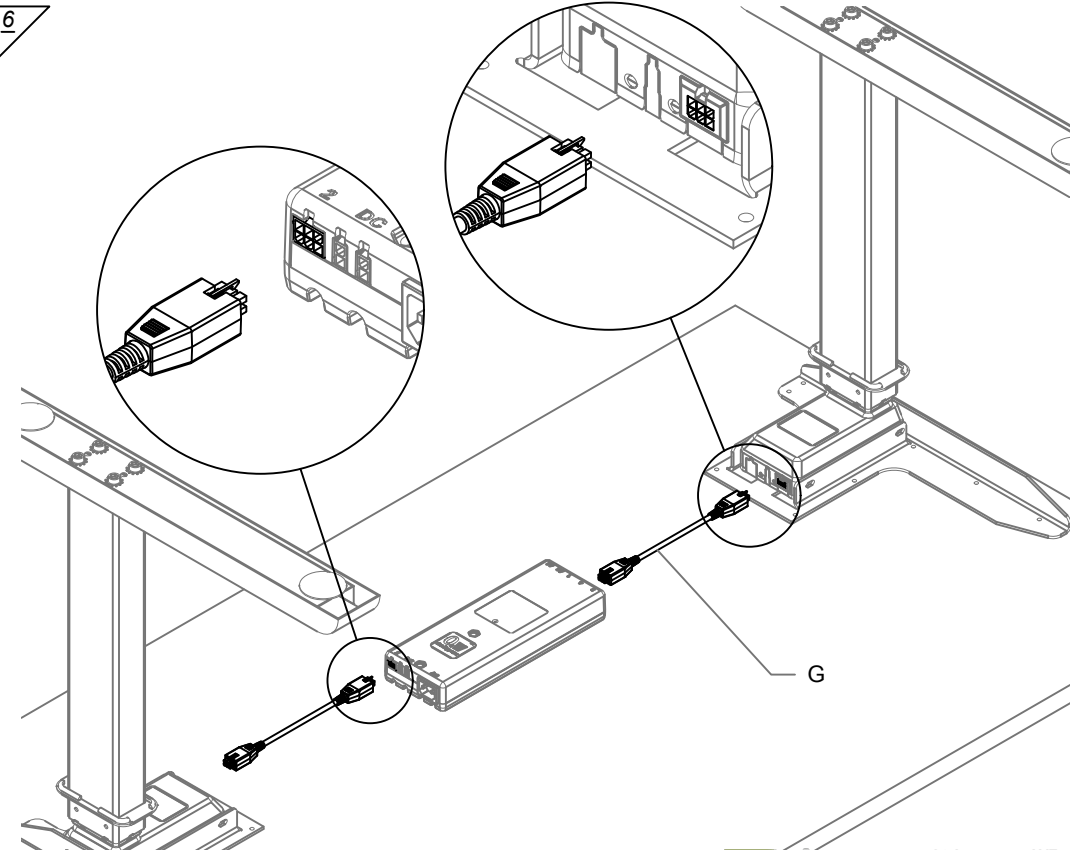


7

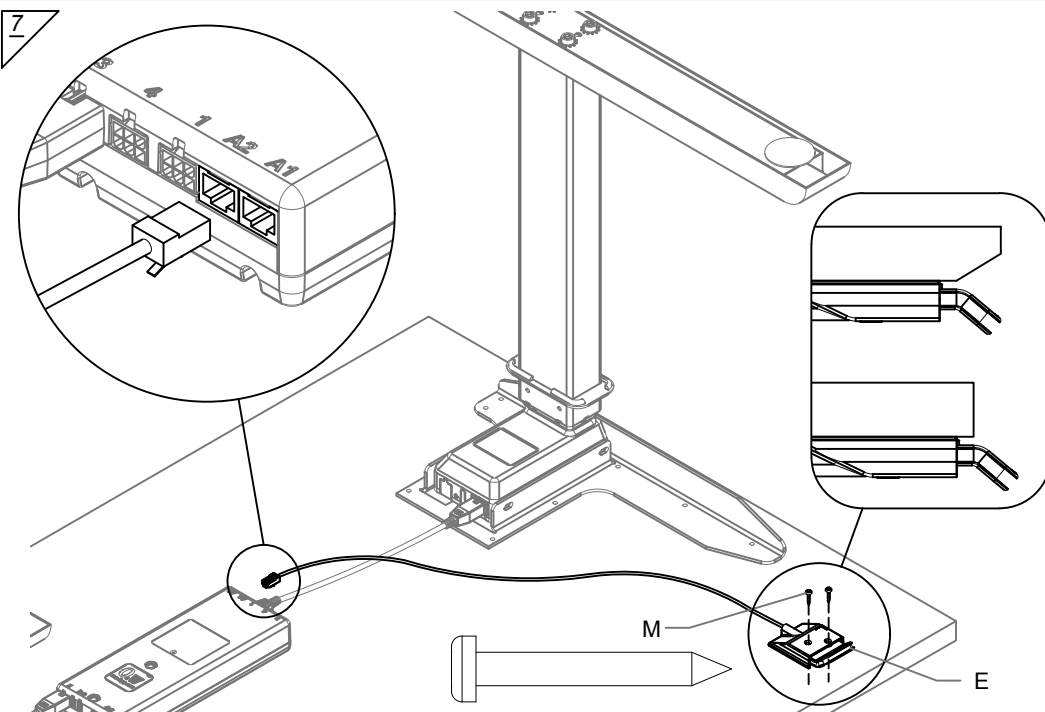


8

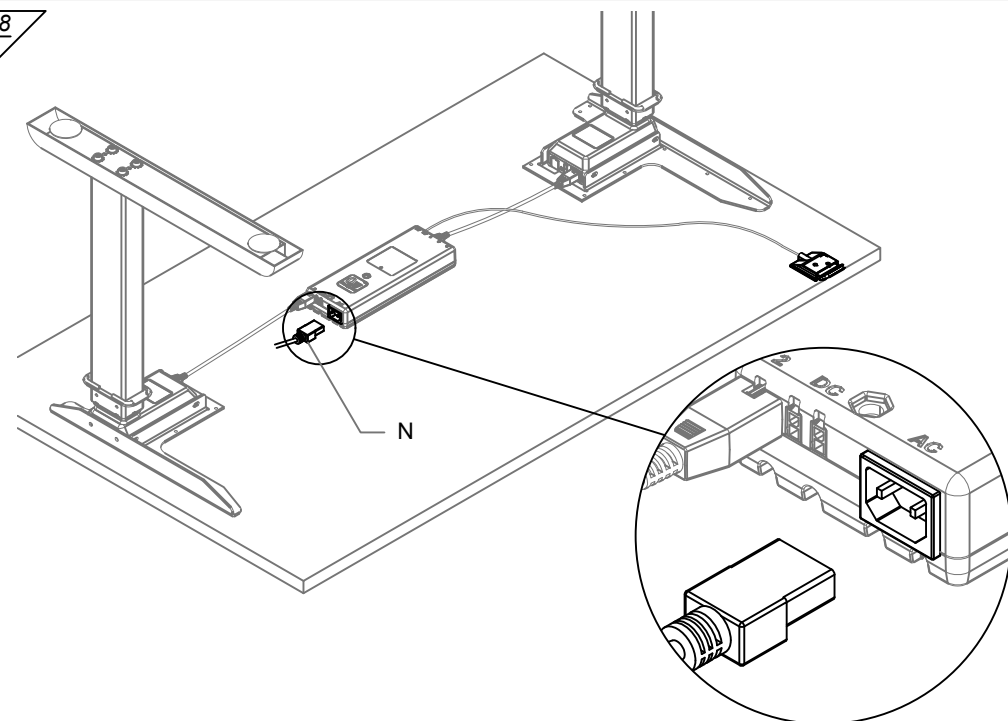

9

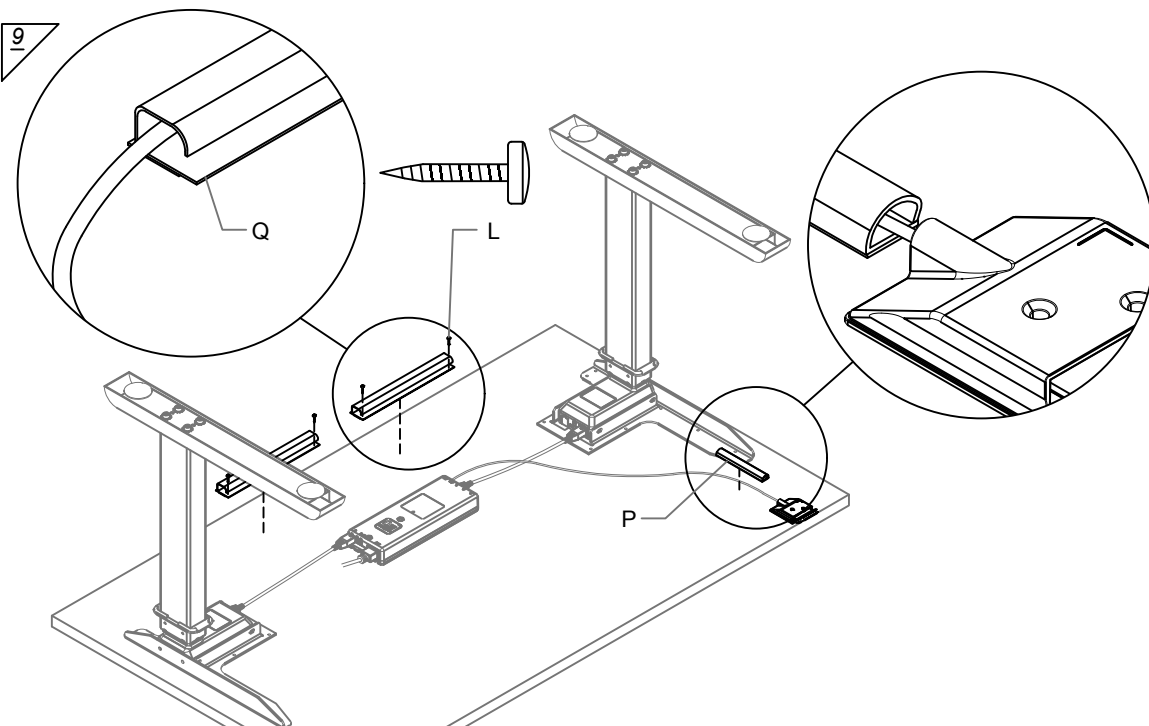

10

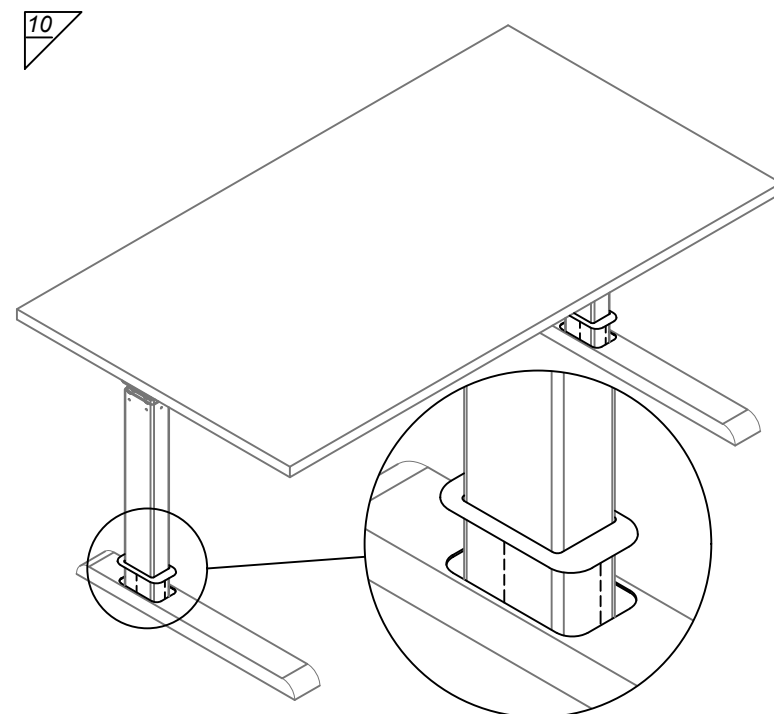

The Desk Panel is operated by tilting;

Tilt and hold the switch up to make the desk drive up, press and hold the switch down to make the desk drive down. release the switch, when you have reached your requested position.

Figure 1: Tilt and hold the switch to make the desk drive up



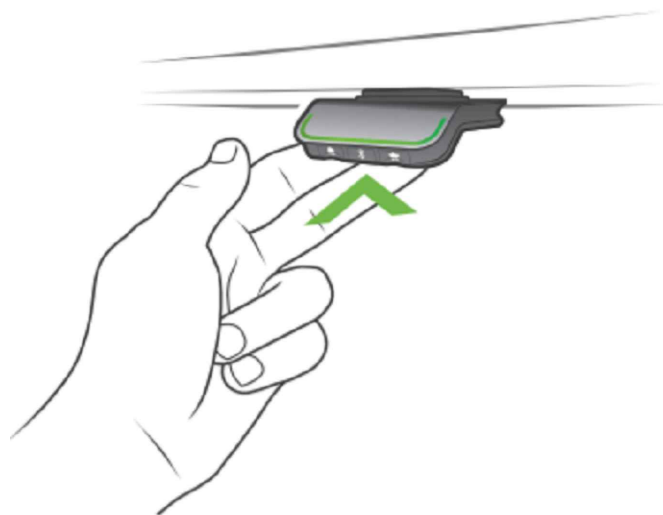


Figure 2: Press and hold the switch to make the desk drive down

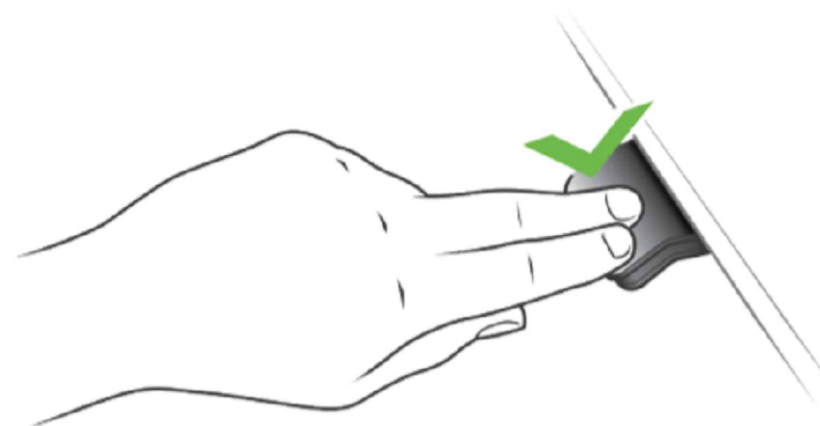

NOTE: For further instruction of the switch functions, please refer to DPG Viva Controller User Guide.

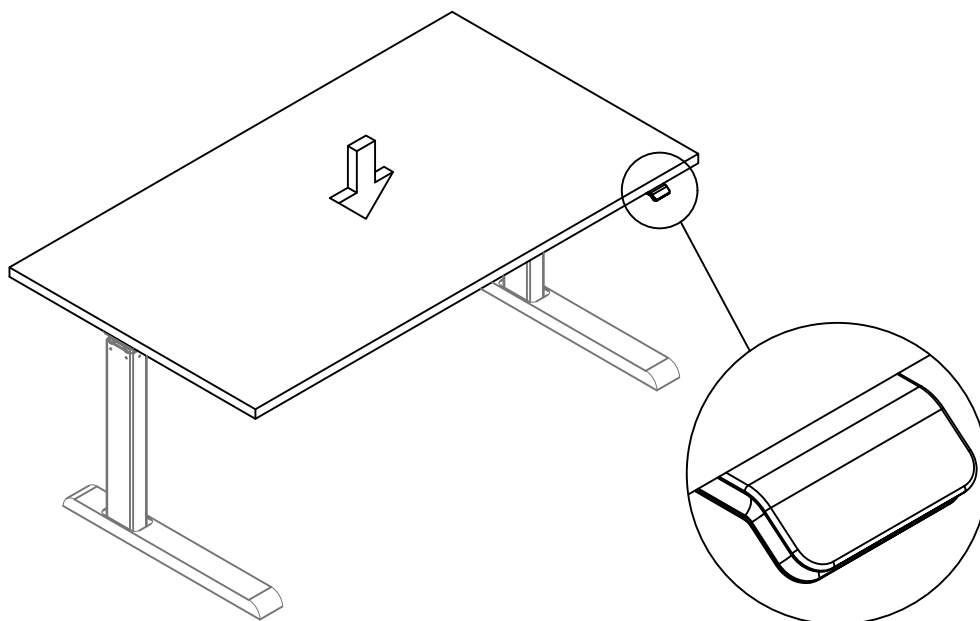

Initialization of the DESKLINE DL6 parallel systems

The DESKPOWER system is Initialized by pressing the the switch down once or twice and hold until the DL6 runs into end stop. It will then automatically run approx. 5mm out again and hereafter slowly run in again. Only release the switch when the movement has completely stopped.

* If the switch is released before the sequence is complete then the Initialization is interrupted and must be started again from the beginning.

It is sometimes necessary to press the switch down twice to start the Initialization, this is because the system can be in different modes when the Initialization starts. There will be a 1.25 sec. delay. If an error situation occurs at the end stop positions or DL6 are changed to another stroke length, then CBD6 control box has to be Initialized again.

The first two times the system runs into the outward end stop, it will automatically run approx. 3mm back in inward direction.

NOTE: For further instruction of the switch functions, please refer to DPG Viva Controller User Guide.

Troubleshooting

Description of Problem	Solution 1	Solution 2	Solution 3
Lifting column will not go up or down	Verify that power supply has power by testing with a plug in lamp or other device. Check to ensure that connections were made in the proper sequence as shown on installation guide. Try disconnecting all and reconnect in the proper sequence. Test again	Check pins on the lift column lead to make sure no pins were damaged. Check pins on the CBD6 - control box to ensure that pins are not damaged	Check wires to ensure that they are not pinched or damaged
Lifting column will not go up or down	Disconnect AC power and motor cables. Try changing the position of the motor cables, and retest		
Leg makes a loud noise when raising or lowering	Inspect leg for physical damage. Contact BRC customer service for information pertaining to leg service or change		
Programmable switch with Digital readout is blank when connected	Disconnect AC power. Disconnect switch cable and motor cables from the control box. Wait 10 minutes with power off. Reconnect cables in this sequence. (1) Motor cables to control box. (2) Switch cable to control box. (3) Connect AC power to control box. (4) follow initialization process as outlined above	Repeat steps outlined in solution 1. Ensure wait time is adhered to, and that connection sequence is correct.	Programmable switch remains blank after solution 1. Contact BRC customer service. BRC customer service to arrange for sales rep to supply a firmware update for the programmable switch unit. (special cable required for operation)
Leg Chatter on downward travel	If programmable switch is being used on the desking system, report if an error code is being displayed on the switch. BRC reference error code chart for causal factor and solution.	(a) Test table with top - record results (b) Test table with top - loaded with weight - record results (c) Test table base with no top - record results. If chatter exists in condition (a) Contact BRC customer service for information pertaining	

****Note testing sequence should include the initialization sequence prior to usage**



SAFETY NOTICE

Instability Hazard

Mobile items on casters such as flip top, personal and movable tables of any type and storage items of any type may present an instability hazard if not secured correctly while in use or in storage. Flip top tables or training tables of any type, are inherently more unstable when folded. BRC provides the following guidelines & warnings when using mobile products:

- Lock casters immediately after moving. Do not leave the casters unlocked when in use or in storage.
- Motion may increase the instability of any item with casters. If the wheels hit an obstruction the table's forward momentum often causes overturn, especially if the item is not equipped with wheel extensions. Exercise strong caution while moving these items.
- Use caution when abrupt level changes in the floor are present (such as a doorway or room threshold) as caster failure or tipping may result.
- Do not stand, sit or lean on mobile items for support. They are not intended for this use and personal injury or property damage may result.
- Mobile units that feature height adjustable elements must be lowered to the minimum compressed height when moving to prevent instability. It is also recommended the user remove all computer equipment or other accessories to prevent possible weight imbalance or damage to equipment.
- Failure to follow the guidelines above may result in property damage or personal injury.

Heavy Load

- This product must be anchored to wall to ensure stability & safety.
- It is the owner and installers responsibility to ensure that the wall type and construction is of sufficient strength to carry the loads of any wall mounted products and their contents.
- Failure of the wall and anchors to support all imposed loads may result in property damage or personal injury.
- BRC can provide size and empty weight of its products only. As wall blocking is considered a building construction process, BRC cannot provide recommendations in this respect and cannot be responsible for damage or injury that may occur as a result of improper installation and/or blocking.

Load Bottom Drawer First!

- Operate one drawer at a time.
- Unit may tip if loaded incorrectly.
- Unit should be attached to a wall or other furniture to reduce tipping hazard.
- Always load the heaviest files in the bottom drawer.
- Failure to follow the guidelines above may result in property damage or personal injury.